



DS6400

QUICK REFERENCE GUIDE



CONTENTS

DS6400-100-010 MASTER/SLAVE MODEL	1
DS6400-100-011 PROFIBUS MODEL	8
DS6400-100-012 ETHERNET MODEL	13
DS6400-100-015 DEVICENET MODEL	18
DS6400-105-0XX OSCILLATING MIRROR MODEL	23
COMMON FEATURES	25



NOTE

For further details on product installation, see the complete Reference Manual available on the configuration CD-ROM included with this product.

SERVICES AND SUPPORT

Datalogic provides several services as well as technical support through its website. Log on to www.automation.datalogic.com and click on the [links](#) indicated for further information including:

- **PRODUCTS**

Search through the links to arrive at your product page where you can download specific **Manuals** and **Software & Utilities** including:

- **Genius™** a utility program, which allows device configuration using a PC. It provides RS232 interface configuration.

- **SERVICES & SUPPORT**

- **Datalogic Services** - Warranty Extensions and Maintenance Agreements

- **Authorised Repair Centres**

- **CONTACT US**

E-mail form and listing of Datalogic Subsidiaries

DS6400-100-010 MASTER/SLAVE MODEL

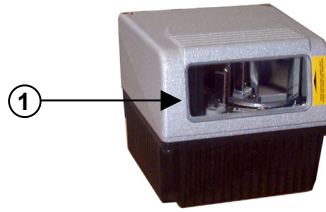


Figure A

① Laser Beam Output Window

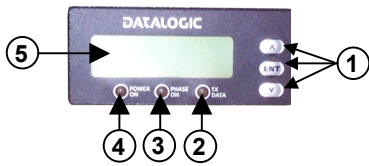


Figure B

- ① Programming Keypad
- ② TX Data LED (Green)
- ③ Phase On LED (Yellow)
- ④ Power On LED (Red)
- ⑤ LCD Display





Figure C

- ① Main/Aux. Interface 25-pin D-sub Male Connector
- ② Lonworks 9-pin Male Connector
- ③ Lonworks 9-pin Female Connector

Available Models:

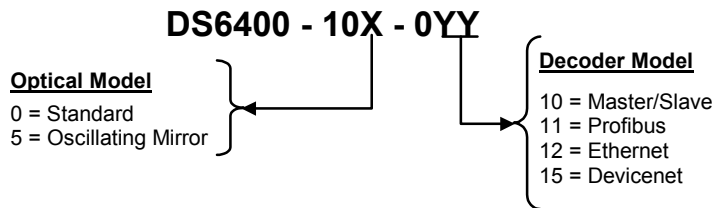

Technical Features:

ELECTRICAL FEATURES		OPTICAL FEATURES			
Supply Voltage	15 - 30 Vdc		Light Receiver	Avalanche photodiode	
Power Consumption	15 W typical 20 W Max. (including startup current)		Wavelength	630 to 680 nm	
Communication Interfaces	Main (isolated)	Baud Rate	Safety Class	Class 2-EN 60825-1; Class II-CDRH	
	RS232		1200 to 115200	Laser Control	Security system to turn laser off in case of motor slow down
	RS485 full-duplex			READING FEATURES	
	RS485 half-duplex	19200	Scan Rate	600-1200 scans/s	
	20 mA C.L. (INT-30 with C-BOX 100 only)		Auxiliary	Max. Resolution Max. Read. Distance Max. Read. Width Max. Depth of Field	(see reading diagram)
	RS232	1200 to 115200			
Other		USER INTERFACE			
Inputs Ext. Trigger 1, 3 aux. digital inputs	(optocoupled NPN or PNP)		LCD Display	2 lines by 16 characters LCD	
	Outputs 3 software programmable digital outputs	(optocoupled)		Keypad	3 keys
		LED Indicators	Power ON (red) Phase ON (yellow) TX Data (green)		

SOFTWARE FEATURES		ENVIRONMENTAL FEATURES	
Readable Codes	Interleaved 2/5	Operating Temperature	0° to +40 °C (+32° to +104 °F)
	Code 39 standard Codabar Code 128 EAN 128 Code 93 (Standard & Full ASCII) EAN/UPC (including Add-on 2 and Add-on 5)		Storage Temperature
Code Selection	Up to 10 codes during one reading phase	Humidity	90% non condensing
Headers and Terminators	Up to 128-byte headers and 128-byte terminators	Ambient Light Immunity	3500 lux
Operating Modes	On Line, Automatic, Test, PackTrack™	Vibration Resistance	14mm @ 2 to 10Hz 1.5 mm @ 13 to 55 Hz 2 g @ 70 to 200 Hz 2 hours on each axis
Config. Mode	Genius™ utility program	Shock Resistance	IEC 68-2-27 test EA 30 g; 11 ms 3 shocks on each axis
Param. Storage	Non-volatile internal FLASH	Protection Class	IP64
PHYSICAL FEATURES			
	Std Models	Oscill. Mirror	
Dimensions mm (inch)	110x113x99 (4.33x4.45x3.9)	113x180x104.5 (4.45x7.08x4.11)	
Weight	1.5 kg (3.3 lb)	2.0 kg (4.4 lb)	

Accessories:


Name	Description	Part Number
CAB-6001	Cable to C-BOX100 1 m	93A051190
CAB-6002	Cable to C-BOX100 2 m	93A051200
CAB-6005	Cable to C-BOX100 5 m	93A051210
CAB-6010	Cable to C-BOX100 10 m	93A051271
CAB-6101	Cable master/slave 1 m	93A051220
CAB-6102	Cable master/slave 2 m	93A051230
CAB-6105	Cable master/slave 5 m	93A051240
CAB-6112	Cable master/slave no power 2 m	93A051224
CAB-6115	Cable master/slave no power 5 m	93A051225
CAB-6305	Power cable Fam 6k 5 m	93ACC1768
CAB-6310	Power cable Fam 6k 10 m	93ACC1752
C-BOX 100	Passive connection box	93ACC1510
INT-30	20 mA C.L. interface board for C-BOX 100	93A151022
GFC-60	90° mirror	93A201100
GFC-600	90° mirror close distance	93A201102
PWR-120	Power unit 110/230 V AC - 24 V DC	93ACC1530
BTK-6000	Terminator kit (5 pcs)	93ACC1710
PG6002	Single unit power supply – US	93ACC1718
PG6001	Single unit power supply – UK	93ACC1719
PG6000	Single unit power supply – EU	93ACC1720
FBK-6000	Fast bracket kit (2 pcs)	93ACC1721
US-60	Mounting bracket kit (5 pcs) for multisided stations	890001020
PH-1	Photocell kit – PNP	93ACC1791
MEP-543	Photocell kit – NPN	93ACC1728
OEK-2	Optical encoder (10 m cable + spring)	93ACC1770
OEK-1	Optical encoder kit +10 m cable	93ACC1600

Electrical Connections:

The DS6400 reader provides a 25-pin male D-sub connector for connection to power supply, Host interface (Main and Aux), and input/output signals.


Two 9-pin connectors provide access to the scanner's local Lonworks network used for both input and output connections to build a multi-sided or omni-station system.

The details of the connector pins are indicated in the following table:

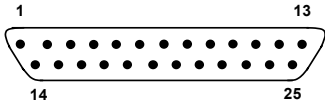25-pin D-Sub Connector Pinout						
Pin	Name	Function				
1	CHASSIS	Chassis - internally connected to GND Cable shield connected to chassis	 <p>25-pin male D-sub Connector</p>			
20	RXAUX	Receive data of auxiliary RS232 (referred to GND)				
21	TXAUX	Transmit data of auxiliary RS232 (referred to GND)				
8	OUT 1+	Configurable digital output 1 – positive pin				
22	OUT 1-	Configurable digital output 1 – negative pin				
11	OUT 2+	Configurable digital output 2 – positive pin				
12	OUT 2-	Configurable digital output 2 – negative pin				
16	OUT 3A	Configurable digital output 3 – polarity insensitive				
17	OUT 3B	Configurable digital output 3 – polarity insensitive				
18	EXT_TRIG/PS A	External trigger (polarity insensitive) for PS				
19	EXT_TRIG/PS B	External trigger (polarity insensitive) for PS				
6	IN2/ENC A	Input signal 2 (polarity insensitive) for Encoder				
10	IN2/ENC B	Input signal 2 (polarity insensitive) for Encoder				
14	IN3A	Input signal 3 (polarity insensitive)				
15	IN4A	Input signal 4 (polarity insensitive)				
24	IN_REF	Common reference of IN3 and IN4 (polarity insensitive)				
9, 13	VS	Supply voltage – positive pin				
23, 25	GND	Supply voltage – negative pin				
Pin	RS232	RS485 Full-Duplex			RS485 Half-Duplex	20 mA C.L. (INT-30 with C-BOX 100 only)
2	TX	TX485+			RTX485+	see INT-30 instructions
3	RX	* RX485+				
4	RTS	TX485-			RTX485-	
5	CTS	* RX485-				
7	GND_ISO	GND_ISO			GND_ISO	

* Do not leave floating, see Reference Manual for connection details.

9-pin Lonworks Connector Pinout		
Pin	Name	Function
1	CHASSIS	Cable shield internally connected by capacitor to chassis
9	VS	Supply voltage – positive pin
2	GND	Supply voltage – negative pin
6	VS_I/O	Supply voltage of I/O circuit
3	Ref_I/O	Reference voltage of I/O circuit
4	SYS_ENC_I/O	System signal
5	SYS_I/O	System signal
7	LON A	Lonworks line (polarity insensitive)
8	LON B	Lonworks line (polarity insensitive)

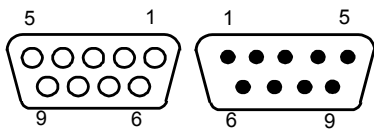


Female Male

9-pin Local Lonworks Connectors


Network Termination:

When building a local Lonworks system the network must be properly terminated by positioning a BTK-6000 terminator on the DS6400 master reader (BTK-6000 female side) and on the last slave reader (BTK-6000 male side).

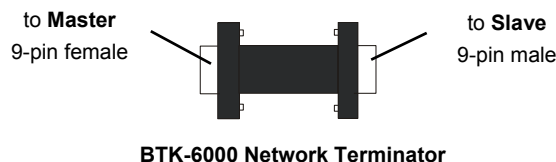


Connectivity:

Point-to-Point Layout

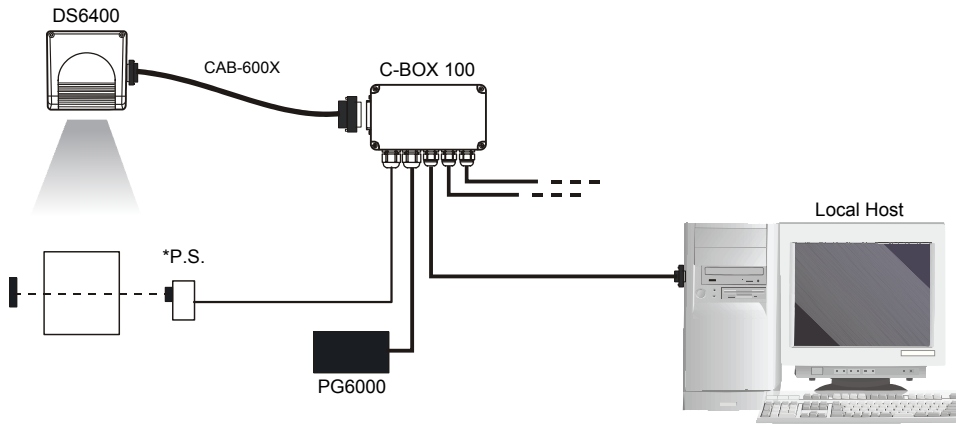

* P.S. (Presence Sensor) connected to External Trigger/PS input.


Pass Through Layout

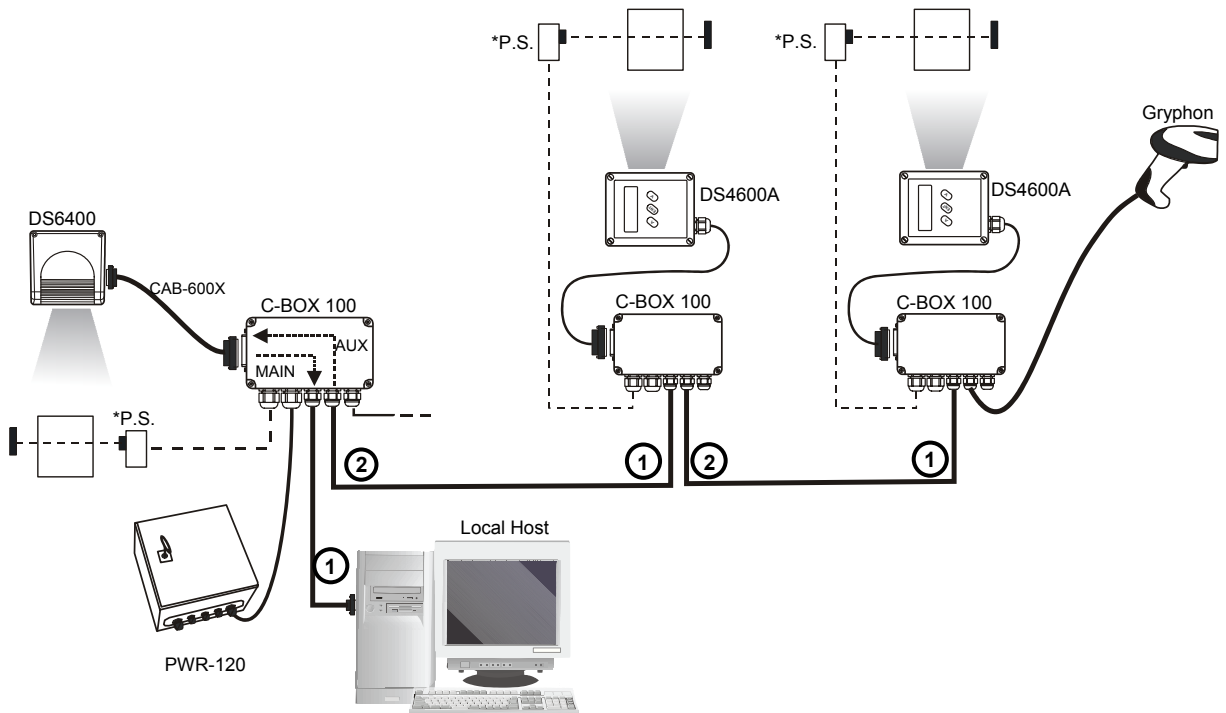

- ① Main Serial Interface
- ② Auxiliary Serial Interface

* P.S. (Presence Sensor) connected to External Trigger/PS input.


Multiplexer Layout

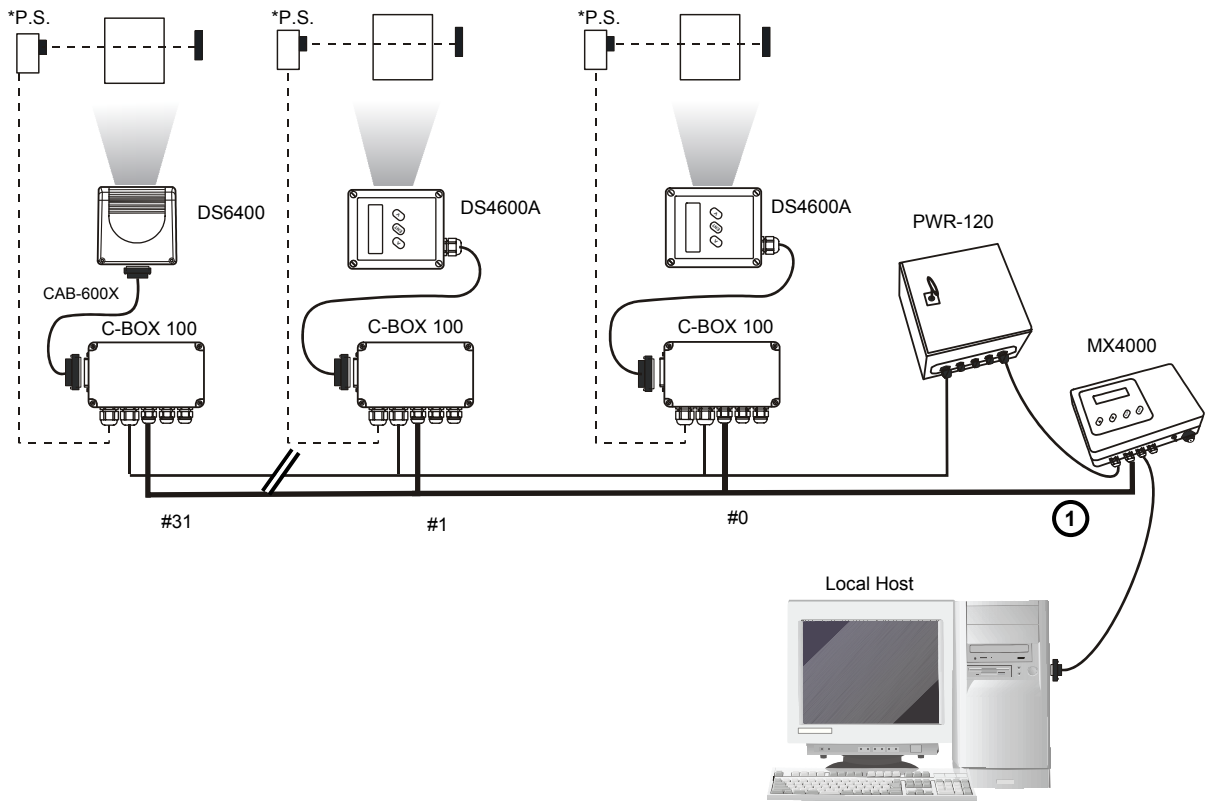

① RS485 HD Main Interface

* P.S. (Presence Sensor) connected to External Trigger/PS input.


RS232 Master/Slave Layout

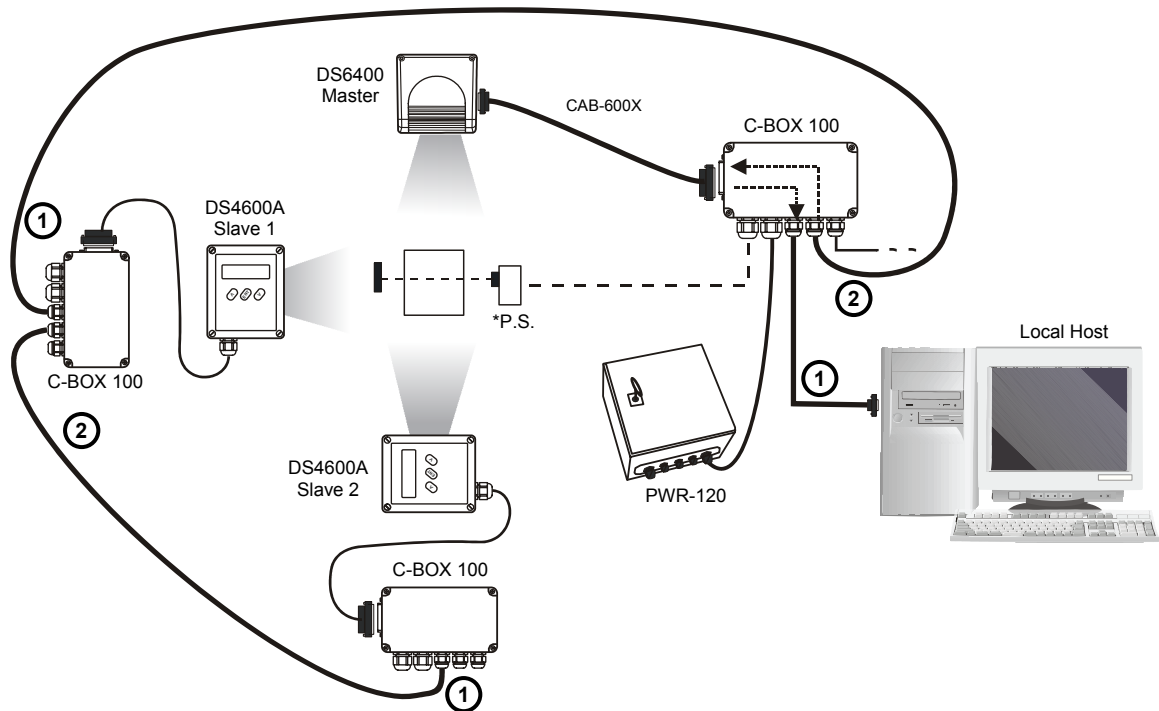

① Main Serial Interface


② Auxiliary Serial Interface

* P.S. (Presence Sensor) connected to External Trigger/PS input.

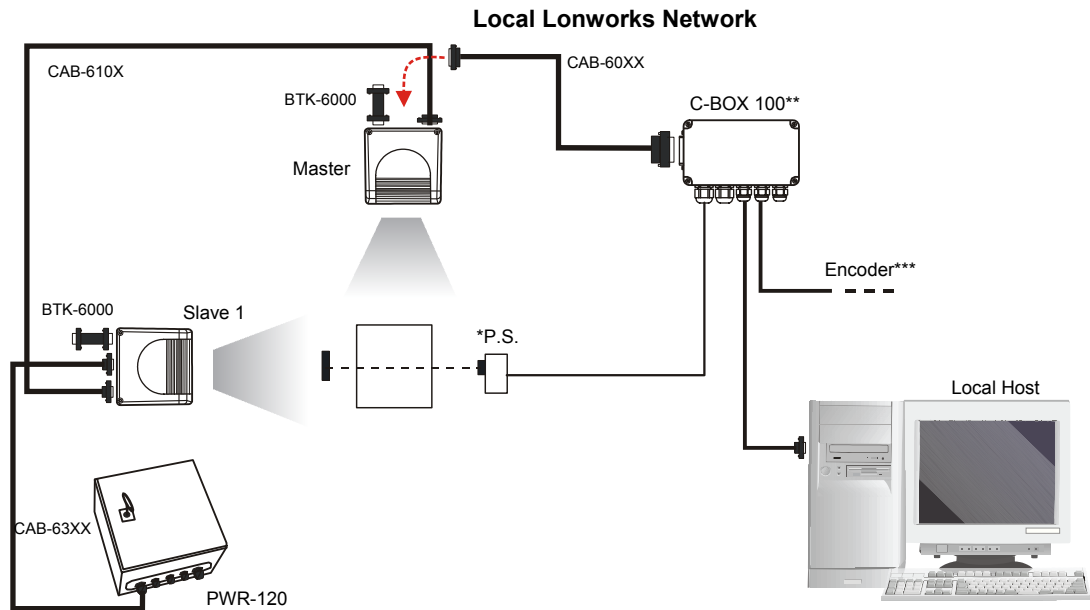


Small Synchronized Network with 2 Readers

- * P.S. (Presence Sensor) connected to External Trigger/PS input.
- ** C-BOX 100 modified to accept scanner power.
- *** Encoder connected to IN2/ENC input.

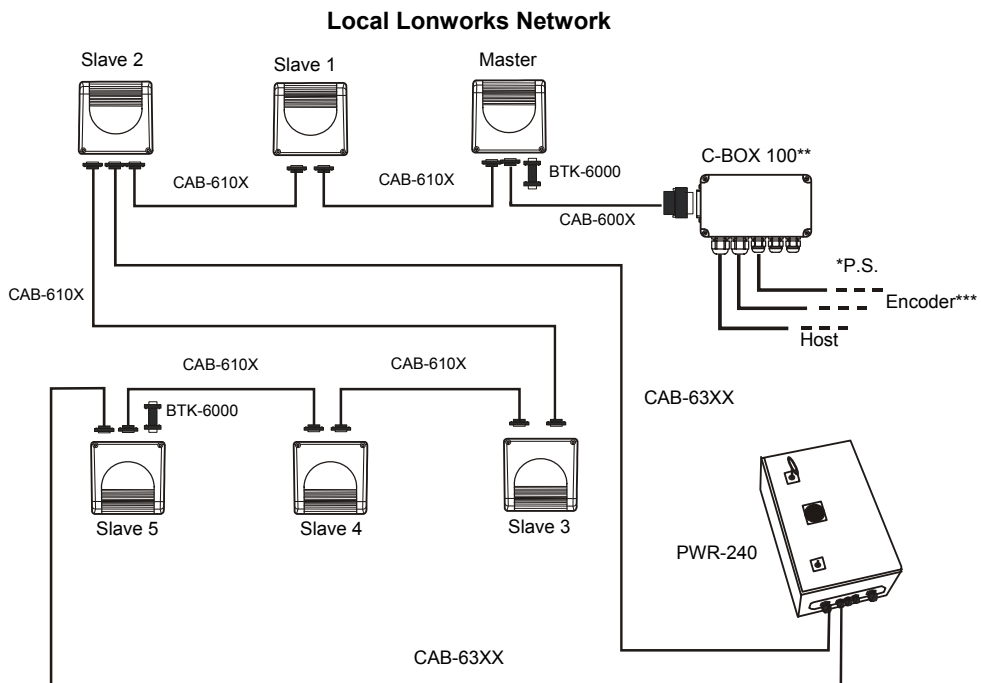

Small Synchronized Network with more than 2 Readers and Single Power Unit

- * P.S. (Presence Sensor) connected to External Trigger/PS input.
- ** C-BOX 100 modified to accept scanner power.
- *** Encoder connected to IN2/ENC input.

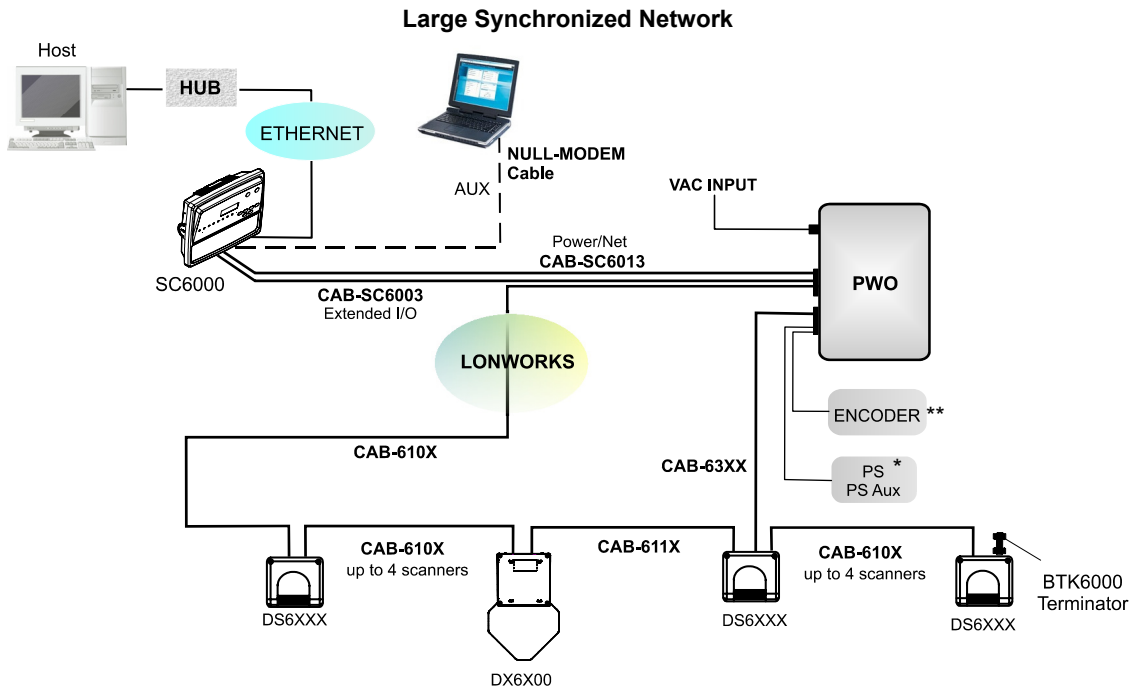

* P.S. (Presence Sensor) connected to External Trigger/PS input.

** Encoder connected to ENC input.

Large Synchronized Network with DX6X00 and DS6XXX Scanners

DS6400-100-011 PROFIBUS MODEL

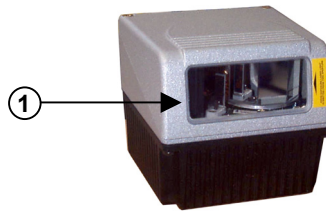


Figure A

① Laser Beam Output Window

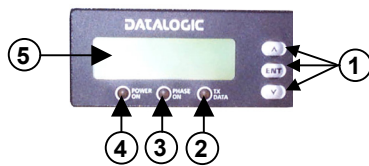


Figure B

- ① Programming Keypad
- ② TX Data LED (Green)
- ③ Phase On LED (Yellow)
- ④ Power On LED (Red)
- ⑤ LCD Display





Figure C

- ① Profibus 9-pin Female Connector (white)
- ② Lonworks 9-pin Female Connector
- ③ Main/Aux. Interface 26-pin D-Sub Male Connector

Available Models:

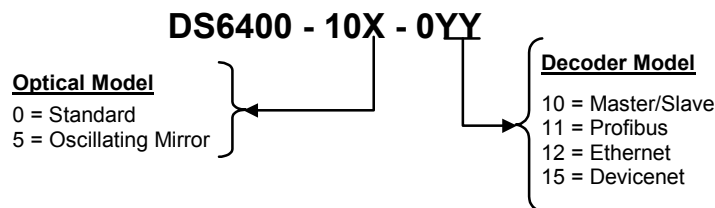

Technical Features:

ELECTRICAL FEATURES		OPTICAL FEATURES		
Supply Voltage	15 - 30 Vdc	Light Receiver	Avalanche photodiode	
Power Consumption	15 W typical 20 W Max. (including startup current)	Wavelength	630 to 680 nm	
Communication Interfaces	Main (isolated)	Baud Rate	Safety Class	
	RS232	1200 to 115200		Class 2-EN 60825-1; Class II-CDRH
	RS485 full-duplex			
	RS485 half-duplex		19200	Laser Control
	20 mA C.L. (INT-30 with C-BOX 100 only)	READING FEATURES		
	Auxiliary		Scan Rate	600-1200 scans/s
	RS232	1200 to 115200	Max. Resolution Max. Read. Distance Max. Read. Width Max. Depth of Field	(see reading diagram)
Other				
Lonworks	1.25 Mb/s			
Ethernet	10 or 100 Mb/s			
Inputs	(optocoupled NPN or PNP)	USER INTERFACE		
Ext. Trigger 1, 3 aux. digital inputs		LCD Display	2 lines by 16 characters LCD	
Outputs	(optocoupled)	Keypad	3 keys	
		3 software programmable digital outputs	LED Indicators	Power ON (red) Phase ON (yellow) TX Data (green)

SOFTWARE FEATURES		ENVIRONMENTAL FEATURES		
Readable Codes	Interleaved 2/5	Operating Temperature	0° to +40 °C (+32° to +104 °F)	
	Code 39 standard		Storage Temperature	-20° to +70 °C (-4° to +158 °F)
	Codabar	Humidity		90% non condensing
	Code 128	Ambient Light Immunity		3500 lux
	EAN 128		Vibration Resistance	14mm @ 2 to 10Hz 1.5 mm @13 to 55 Hz 2 g @ 70 to 200 Hz 2 hours on each axis
Code 93 (Standard & Full ASCII)	Code Selection	IEC 68-2-6 test FC		Shock Resistance
EAN/UPC (including Add-on 2 and Add-on 5)			Up to 10 codes during one reading phase	
Headers and Terminators	Up to 128-byte headers and 128-byte terminators	Operating Modes	On Line, Automatic, Test, PackTrack™	
Config. Mode	Genius™ utility program	Param. Storage	Non-volatile internal FLASH	
PHYSICAL FEATURES				
	Std Models	Oscill. Mirror		
Dimensions mm (inch)	110x113x99 (4.33x4.45x3.9)	113x180x104.5 (4.45x7.08x4.11)		
Weight	1.5 kg (3.3 lb)	2.0 kg (4.4 lb)		

Accessories:

Name	Description	Part Number
CAB-6011	Cable to C-BOX100 1 m	93A051221
CAB-6012	Cable to C-BOX100 2 m	93A051222
CAB-6015	Cable to C-BOX100 5 m	93A051223
C-BOX 100	Passive connection box	93ACC1510
INT-30	20 mA C.L. interface board for C-BOX 100	93A151022
GFC-60	90° mirror	93A201100
GFC-600	90° mirror close distance	93A201102
PWR-120	Power unit 110/230 V AC - 24 V DC	93ACC1530
BTK-6000	Terminator kit (5 pcs)	93ACC1710
PG6002	Single unit power supply – US	93ACC1718
PG6001	Single unit power supply – UK	93ACC1719
PG6000	Single unit power supply – EU	93ACC1720
FBK-6000	Fast bracket kit (2 pcs)	93ACC1721
US-60	Mounting bracket kit (5 pcs) for multisided stations	890001020
PH-1	Photocell kit – PNP	93ACC1791
MEP-543	Photocell kit – NPN	93ACC1728
OEK-2	Optical encoder (10 m cable + spring)	93ACC1770
OEK-1	Optical encoder kit +10 m cable	93ACC1600


Electrical Connections:

The DS6400 Profibus reader provides a 26-pin male D-sub connector for connection to power supply and input/output signals.

An 9-pin Profibus connector is used for connection to the remote Host, while a local Lonworks 9-pin female connector connects the Profibus master to the first slave reader of the system.

The details of the connector pins are indicated in the following table:

26-pin D-Sub Connector Pinout				
Pin	Name	Function		
1	CHASSIS	Chassis - internally connected to GND		
20	RXAUX	Cable shield connected to chassis		
21	TXAUX	Receive data of auxiliary RS232 (referred to GND)		
8	OUT 1+	Transmit data of auxiliary RS232 (referred to GND)		
22	OUT 1-	Configurable digital output 1 – positive pin		
11	OUT 2+	Configurable digital output 1 – negative pin		
12	OUT 2-	Configurable digital output 2 – positive pin		
16	OUT 3A	Configurable digital output 2 – negative pin		
17	OUT 3B	Configurable digital output 3 – polarity insensitive		
18	EXT_TRIG/PS A	Configurable digital output 3 – polarity insensitive		
19	EXT_TRIG/PS B	External trigger (polarity insensitive) for PS		
6	IN2/ENC A	External trigger (polarity insensitive) for PS		
10	IN2/ENC B	Input signal 2 (polarity insensitive) for Encoder		
14	IN3A	Input signal 2 (polarity insensitive) for Encoder		
15	IN4A	Input signal 3 (polarity insensitive)		
24	IN_REF	Input signal 4 (polarity insensitive)		
9, 13	VS	Common reference of IN3 and IN4 (polarity insensitive)		
23, 25, 26	GND	Supply voltage – positive pin		
		Supply voltage – negative pin		




26-pin male D-sub Connector

Pin	RS232	RS485 Full-Duplex	RS485 Half-Duplex	20 mA C.L. (INT-30 with C-BOX 100 only)
2	TX	TX485+	RTX485+	see INT-30 instructions
3	RX	* RX485+		
4	RTS	TX485-	RTX485-	
5	CTS	* RX485-		
7	GND_ISO	GND_ISO	GND_ISO	


* Do not leave floating, see Reference Manual for connection details.

9-pin Lonworks Connector Pinout		
Pin	Name	Function
1	CHASSIS	Cable shield internally connected by capacitor to chassis
9	VS	Supply voltage – positive pin
2	GND	Supply voltage – negative pin
6	VS_I/O	Supply voltage of I/O circuit
3	Ref_I/O	Reference voltage of I/O circuit
4	SYS_ENC_I/O	System signal
5	SYS_I/O	System signal
7	LON A	Lonworks line (polarity insensitive)
8	LON B	Lonworks line (polarity insensitive)

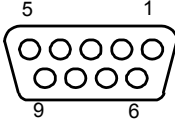

9-pin female Local Lonworks Connector


9-pin Profibus Connector		
Pin	Name	Function
1	Shield	Shield, Protective Ground resp. (optional)
2	Free	
3	B-LINE (RxD/TxD-P)	Received/Transmitted Data-P
4	CNTR-P	Repeater Control Signal (optional, RS485 level)
5	DGND	Data Ground (M5V)
6	+5 V	Voltage Plus (P5V)
7	Free	
8	A-LINE (RxD/TxD-N)	Received/Transmitted Data
9	CNTR-N	Repeater Control Signal

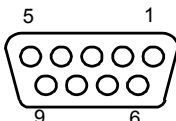

9-pin female Profibus Connector (white)


Connectivity:

Point-to-Point Layout

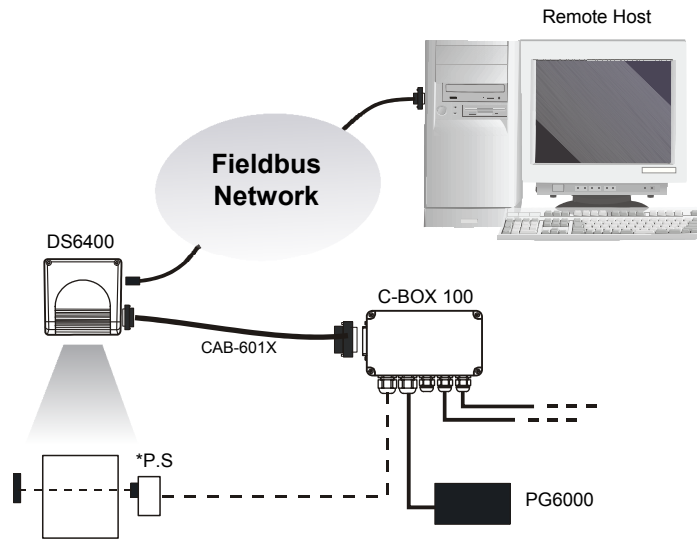

* P.S. (Presence Sensor) connected to External Trigger/PS input.


Pass Through Layout

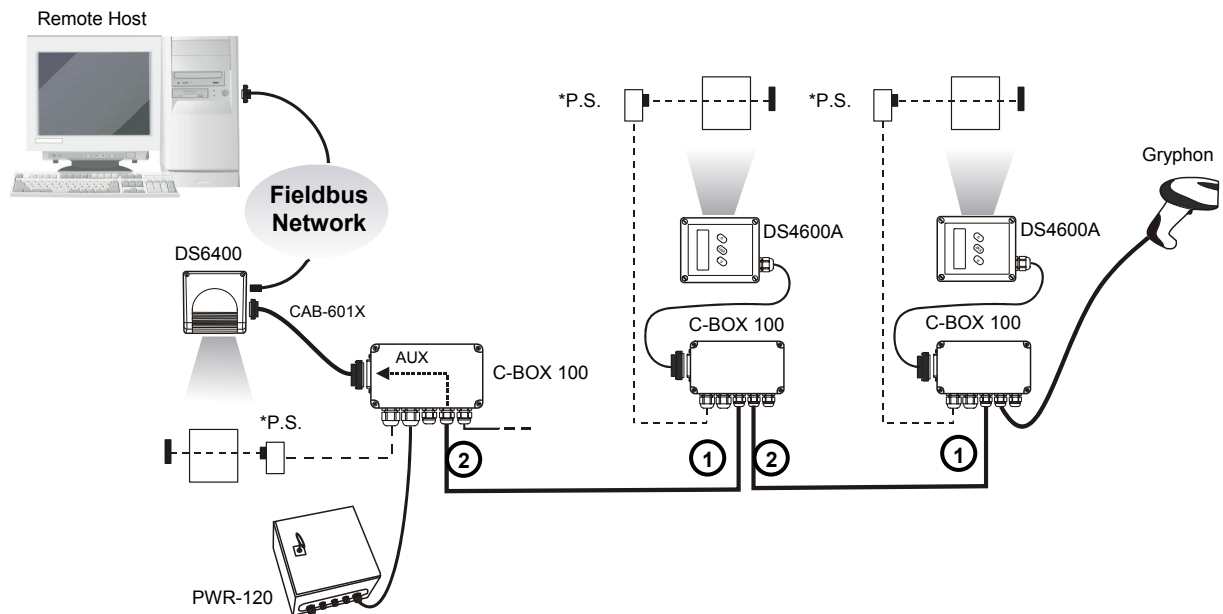

① Main Serial Interface ② Auxiliary Serial Interface

* P.S. (Presence Sensor) connected to External Trigger/PS input.

Local Lonworks Network

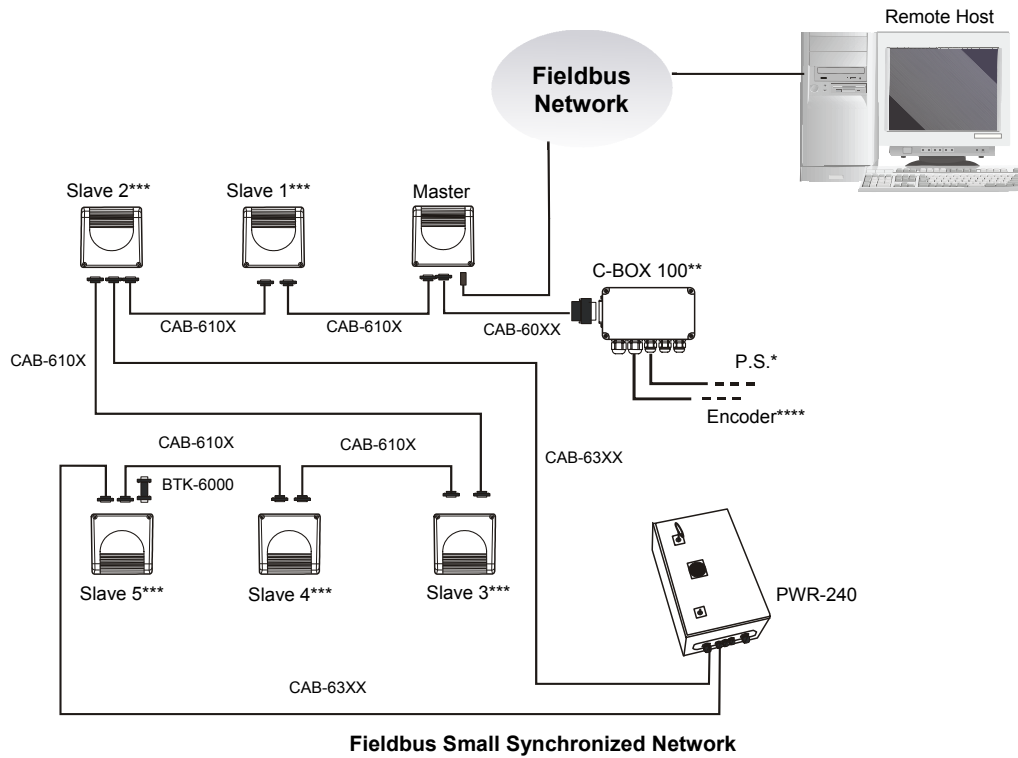

Fieldbus Small Synchronized Network

- * P.S. (Presence Sensor) connected to External Trigger/PS input.
- ** C-BOX 100 modified to accept scanner power.
- *** The Slave scanners are Master/Slave models, which allow Lonworks network propagation.
- **** Encoder connected to IN2/ENC input.

DS6400-100-012 ETHERNET MODEL

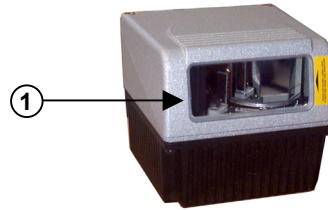


Figure A

① Laser Beam Output Window

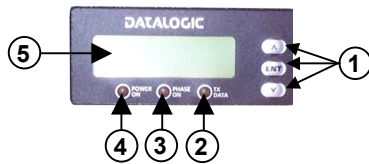


Figure B

- ① Programming Keypad
- ② TX Data LED (Green)
- ③ Phase On LED (Yellow)
- ④ Power On LED (Red)
- ⑤ LCD Display





Figure C

- ① RJ45 Modular Connector for Ethernet Interface
- ② Lonworks 9-pin Female Connector
- ③ Main/Aux. Interface 26-pin D-Sub Male Connector

Available Models:

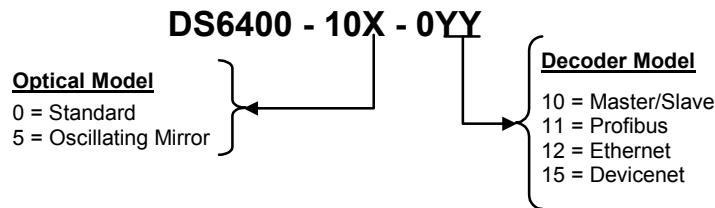

Technical Features:

ELECTRICAL FEATURES		OPTICAL FEATURES		
Supply Voltage	15 - 30 Vdc	Light Receiver	Avalanche photodiode	
Power Consumption	15 W typical 20 W Max. (including startup current)	Wavelength	630 to 680 nm	
Communication Interfaces	Main (isolated)	Safety Class	Class 2-EN 60825-1; Class II-CDRH	
	RS232	1200 to 115200	Laser Control	
	RS485 full-duplex			Security system to turn laser off in case of motor slow down
	RS485 half-duplex			
	20 mA C.L. (INT-30 with C-BOX 100 only)	19200	READING FEATURES	
	Auxiliary		Scan Rate	600-1200 scans/s
	RS232	1200 to 115200	Max. Resolution Max. Read. Distance Max. Read. Width Max. Depth of Field	(see reading diagram)
Other				
Lonworks	1.25 Mb/s			
Ethernet	10 or 100 Mb/s			
Inputs	(optocoupled NPN or PNP)	USER INTERFACE		
Ext. Trigger 1, 3 aux. digital inputs		LCD Display	2 lines by 16 characters LCD	
Outputs	(optocoupled)	Keypad	3 keys	
3 software programmable digital outputs		LED Indicators	Power ON (red) Phase ON (yellow) TX Data (green)	

SOFTWARE FEATURES		ENVIRONMENTAL FEATURES					
Readable Codes	Interleaved 2/5	Operating Temperature	0° to +40 °C (+32° to +104 °F)				
	Code 39 standard		Storage Temperature	-20° to +70 °C (-4° to +158 °F)			
	Codabar			Humidity	90% non condensing		
	Code 128				Ambient Light Immunity	3500 lux	
	EAN 128					Vibration Resistance	14mm @ 2 to 10Hz
	Code 93 (Standard & Full ASCII)						IEC 68-2-6 test FC
EAN/UPC (including Add-on 2 and Add-on 5)	Shock Resistance	2 g @ 70 to 200 Hz					
Code Selection		Up to 10 codes during one reading phase	Protection Class				2 hours on each axis
		Headers and Terminators		Up to 128-byte headers and 128-byte terminators			30 g; 11 ms
Operating Modes				On Line, Automatic, Test, PackTrack™	IEC 68-2-27 test EA		3 shocks on each axis
		Config. Mode		Genius™ utility program		IP50	
Param. Storage				Non-volatile internal FLASH			
	PHYSICAL FEATURES						
	Std Models	Oscill. Mirror					
Dimensions mm (inch)	110x113x99 (4.33x4.45x3.9)	113x180x104.5 (4.45x7.08x4.11)					
	Weight	1.5 kg (3.3 lb)	2.0 kg (4.4 lb)				

Accessories:

Name	Description	Part Number
CAB-6011	Cable to C-BOX100 1 m	93A051221
CAB-6012	Cable to C-BOX100 2 m	93A051222
CAB-6015	Cable to C-BOX100 5 m	93A051223
C-BOX 100	Passive connection box	93ACC1510
INT-30	20 mA C.L. interface board for C-BOX 100	93A151022
GFC-60	90° mirror	93A201100
GFC-600	90° mirror close distance	93A201102
PWR-120	Power unit 110/230 V AC - 24 V DC	93ACC1530
BTK-6000	Terminator kit (5 pcs)	93ACC1710
PG6002	Single unit power supply – US	93ACC1718
PG6001	Single unit power supply – UK	93ACC1719
PG6000	Single unit power supply – EU	93ACC1720
FBK-6000	Fast bracket kit (2 pcs)	93ACC1721
US-60	Mounting bracket kit (5 pcs) for multisided stations	890001020
PH-1	Photocell kit – PNP	93ACC1791
MEP-543	Photocell kit – NPN	93ACC1728
OEK-2	Optical encoder (10 m cable + spring)	93ACC1770
OEK-1	Optical encoder kit +10 m cable	93ACC1600


Electrical Connections:

The DS6400 Ethernet reader provides a 26-pin male D-sub connector for connection to power supply and input/output signals.

An Ethernet connector is used for connection to the remote Host (for ex. Remote PC connected via Internet), while a local Lonworks 9-pin female connector connects the Ethernet master to the first slave reader of the system.

The details of the connector pins are indicated in the following table:

26-pin D-Sub Connector Pinout				
Pin	Name	Function		
1	CHASSIS	Chassis - internally connected to GND		
20	RXAUX	Cable shield connected to chassis		
21	TXAUX	Receive data of auxiliary RS232 (referred to GND)		
8	OUT 1+	Transmit data of auxiliary RS232 (referred to GND)		
22	OUT 1-	Configurable digital output 1 – positive pin		
11	OUT 2+	Configurable digital output 1 – negative pin		
12	OUT 2-	Configurable digital output 2 – positive pin		
16	OUT 3A	Configurable digital output 2 – negative pin		
17	OUT 3B	Configurable digital output 3 – polarity insensitive		
18	EXT_TRIG/PS A	Configurable digital output 3 – polarity insensitive		
19	EXT_TRIG/PS B	External trigger (polarity insensitive) for PS		
6	IN2/ENC A	External trigger (polarity insensitive) for PS		
10	IN2/ENC B	Input signal 2 (polarity insensitive) for Encoder		
14	IN3A	Input signal 2 (polarity insensitive) for Encoder		
15	IN4A	Input signal 3 (polarity insensitive)		
24	IN_REF	Input signal 4 (polarity insensitive)		
9, 13	VS	Common reference of IN3 and IN4 (polarity insensitive)		
23, 25, 26	GND	Supply voltage – positive pin		
		Supply voltage – negative pin		




26-pin male D-sub Connector


Pin	RS232	RS485 Full-Duplex	RS485 Half-Duplex	20 mA C.L. (INT-30 with C-BOX 100 only)
2	TX	TX485+	RTX485+	see INT-30 instructions
3	RX	* RX485+		
4	RTS	TX485-	RTX485-	
5	CTS	* RX485-		
7	GND_ISO	GND_ISO	GND_ISO	

* Do not leave floating, see Reference Manual for connection details.

9-pin Lonworks Connector Pinout		
Pin	Name	Function
1	CHASSIS	Cable shield internally connected by capacitor to chassis
9	VS	Supply voltage – positive pin
2	GND	Supply voltage – negative pin
6	VS_I/O	Supply voltage of I/O circuit
3	Ref_I/O	Reference voltage of I/O circuit
4	SYS_ENC_I/O	System signal
5	SYS_I/O	System signal
7	LON A	Lonworks line (polarity insensitive)
8	LON B	Lonworks line (polarity insensitive)

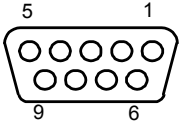


9-pin female Local Lonworks Connector

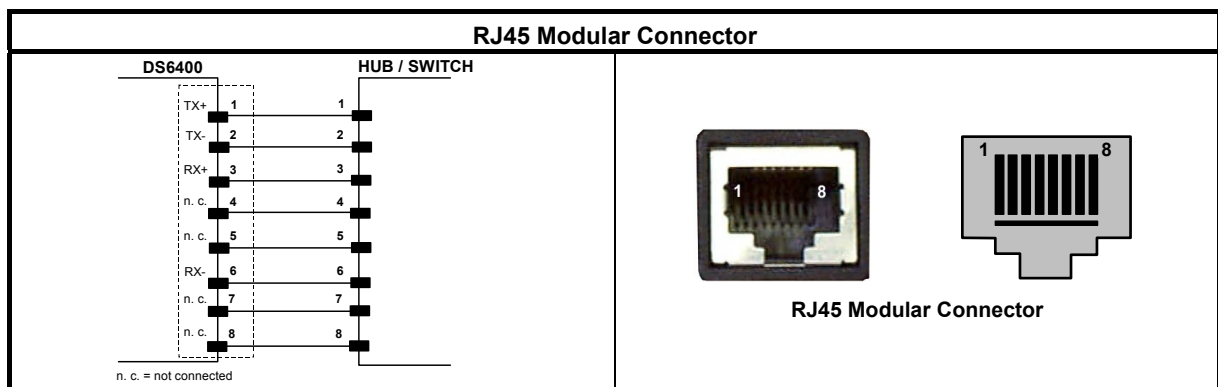


Connectivity:

Point-to-Point Layout

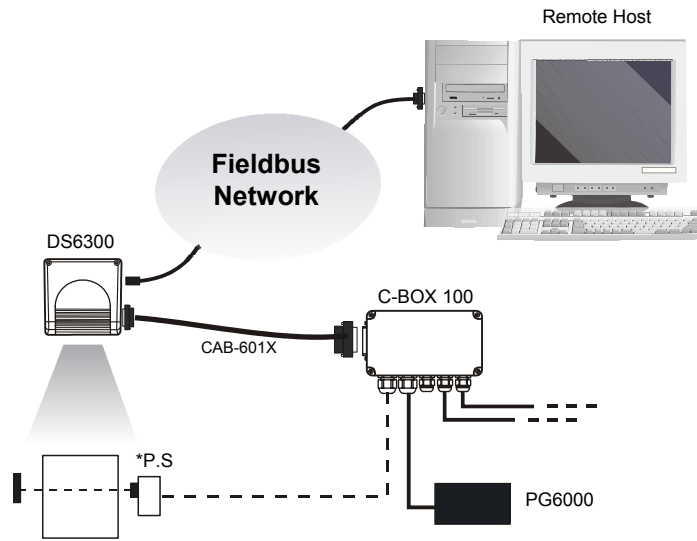

* P.S. (Presence Sensor) connected to External Trigger/PS input.


Pass Through Layout

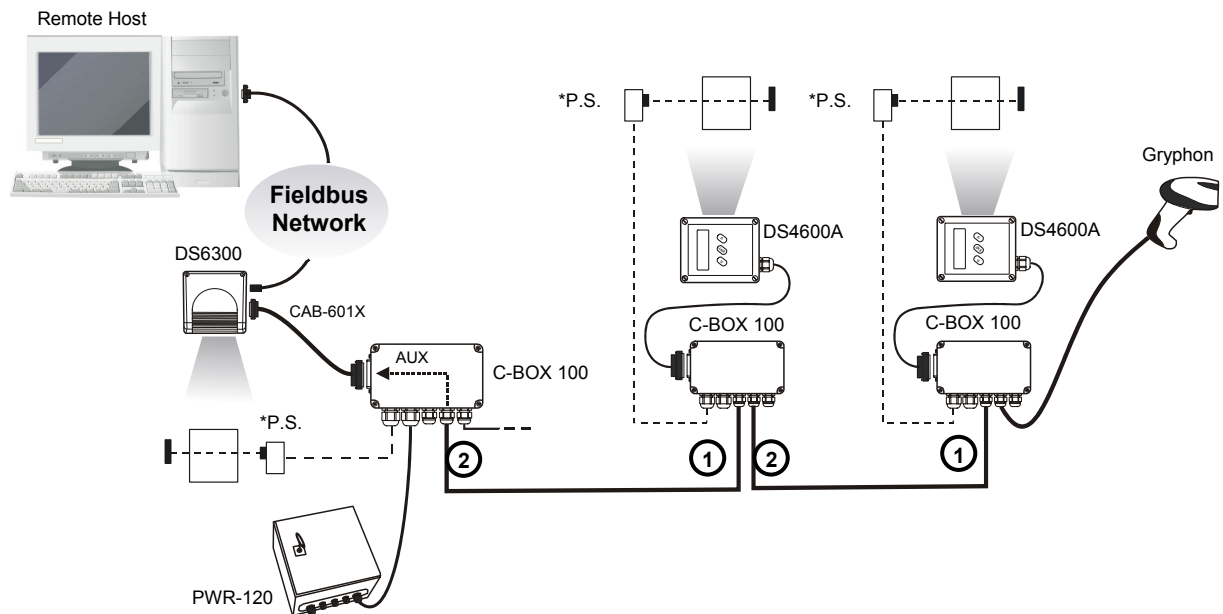

① Main Serial Interface ② Auxiliary Serial Interface

* P.S. (Presence Sensor) connected to External Trigger/PS input.

Local Lonworks Network

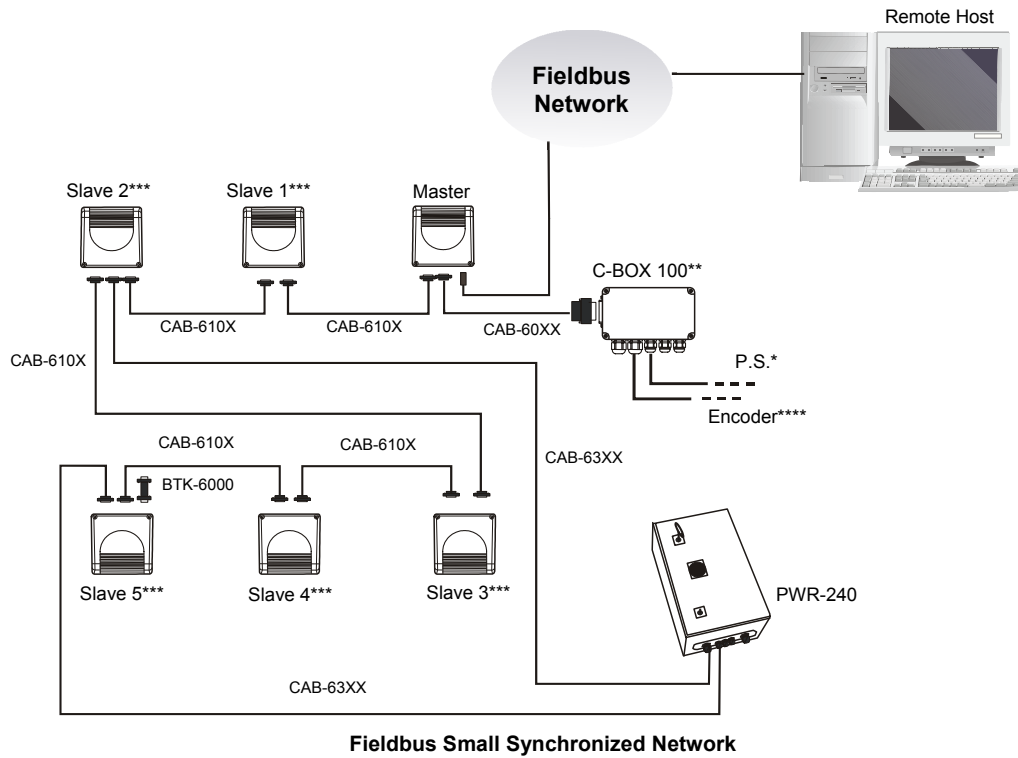

- * P.S. (Presence Sensor) connected to External Trigger/PS input.
- ** C-BOX 100 modified to accept scanner power.
- *** The Slave scanners are Master/Slave models, which allow Lonworks network propagation.
- **** Encoder connected to IN2/ENC input.

DS6400-100-015 DEVICENET MODEL

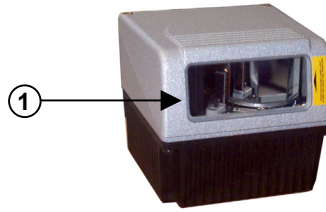


Figure A

① Laser Beam Output Window

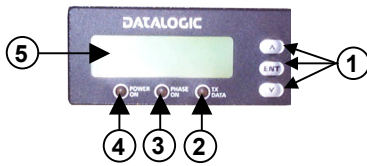



Figure B



Figure C

- ① Programming Keypad
- ② TX Data LED (Green)
- ③ Phase On LED (Yellow)
- ④ Power On LED (Red)
- ⑤ LCD Display
- ① Main/Aux. Interface 26-pin D-sub Male Connector
- ② Lonworks 9-pin Female Connector
- ③ DeviceNet 5-pin Male Connector

Available Models:

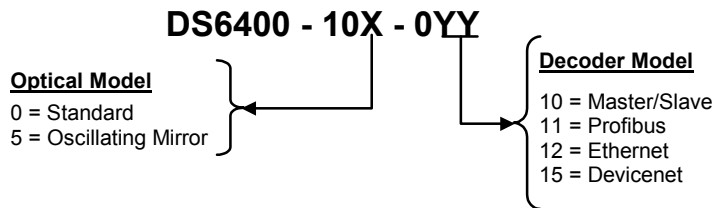

Technical Features:

ELECTRICAL FEATURES		OPTICAL FEATURES		
Supply Voltage	15 - 30 Vdc	Light Receiver	Avalanche photodiode	
Power Consumption	15 W typical 20 W Max. (including startup current)	Wavelength	630 to 680 nm	
Communication Interfaces	Main (isolated)	Baud Rate	Safety Class Class 2-EN 60825-1; Class II-CDRH	
	RS232	1200 to 115200		
	RS485 full-duplex			
	RS485 half-duplex			
	20 mA C.L. (INT-30 with C-BOX 100 only)	19200	Laser Control	Security system to turn laser off in case of motor slow down
	Auxiliary		READING FEATURES	
RS232	1200 to 115200	Scan Rate	600-1200 scans/s	
Other		Max. Resolution Max. Read. Distance Max. Read. Width Max. Depth of Field	(see reading diagram)	
Lonworks	1.25 Mb/s			
DeviceNet	125 or 250 Kb/s			
Inputs Ext. Trigger 1, 3 aux. digital inputs	(opt coupled NPN or PNP)			

ELECTRICAL FEATURES		USER INTERFACE	
Outputs 3 software programmable digital outputs		LCD Display	2 lines by 16 characters LCD
	(optocoupled)	Keypad	3 keys
SOFTWARE FEATURES		LED Indicators	Power ON (red) Phase ON (yellow) TX Data (green)
Readable Codes	Interleaved 2/5 Code 39 standard Codabar Code 128 EAN 128 Code 93 (Standard & Full ASCII) EAN/UPC (including Add-on 2 and Add-n 5)		
Code Selection	Up to 10 codes during one reading phase	ENVIRONMENTAL FEATURES	
Headers and Terminators	Up to 128-byte headers and 128-byte terminators	Operating Temperature	0° to +40 °C (+32 to +104 °F)
		Storage Temperature	-20° to +70 °C (-4° to +158 °F)
Operating Modes	On Line, Automatic, Test, PackTrack™	Humidity	90% non condensing
Config. Mode	Genius™ utility program	Ambient Light Immunity	3500 lux
Parameter Storage	Non-volatile internal FLASH	Vibration Resistance	14 mm @ 2 to 10 Hz IEC 68-2-6 test FC 1.5 mm @ 13 to 55 Hz 2 g @ 70 to 200 Hz 2 hours on each axis
PHYSICAL FEATURES		Shock Resistance	30 g; 11 ms IEC 68-2-27 test EA
	Std Models	Oscill. Mirror	Protection Class IP64
Dimensions mm (inch)	110x113x99 (4.33x4.45x3.9)	113x180x104.5 (4.45x7.08x4.11)	
Weight	1.5 kg (3.3 lb)	2.0 kg (4.4 lb)	


Accessories:

Name	Description	Part Number
CAB-6011	Cable to C-BOX100 1 m	93A051221
CAB-6012	Cable to C-BOX100 2 m	93A051222
CAB-6015	Cable to C-BOX100 5 m	93A051223
C-BOX 100	Passive connection box	93ACC1510
INT-30	20 mA C.L. interface board for C-BOX 100	93A151022
GFC-60	90° mirror	93A201100
GFC-600	90° mirror close distance	93A201102
PWR-120	Power unit 110/230 V AC - 24 V DC	93ACC1530
BTK-6000	Terminator kit (5 pcs)	93ACC1710
PG6002	Single unit power supply – US	93ACC1718
PG6001	Single unit power supply – UK	93ACC1719
PG6000	Single unit power supply – EU	93ACC1720
FBK-6000	Fast bracket kit (2 pcs)	93ACC1721
US-60	Mounting bracket kit (5 pcs) for multisided stations	890001020
PH-1	Photocell kit – PNP	93ACC1791
MEP-543	Photocell kit – NPN	93ACC1728
OEK-2	Optical encoder (10 m cable + spring)	93ACC1770
OEK-1	Optical encoder kit +10 m cable	93ACC1600

Electrical Connections:


The DS6400 DeviceNet reader provides a 26-pin male D-sub connector for connection to power supply and input/output signals.

A DeviceNet connector is used for connection to the remote Host, while a local Lonworks 9-pin female connector connects the DeviceNet master to the first slave reader of the system.

	<p><i>When using DeviceNet, the Main serial interface is disabled and must not be physically connected.</i></p>
NOTE	

The details of the connector pins are indicated in the following table:

26-pin D-Sub Connector Pinout				
Pin	Name	Function		
1	CHASSIS	Chassis - internally connected to GND		
20	RXAUX	Cable shield connected to chassis		
21	TXAUX	Receive data of auxiliary RS232 (referred to GND)		
8	OUT 1+	Transmit data of auxiliary RS232 (referred to GND)		
22	OUT 1-	Configurable digital output 1 – positive pin		
11	OUT 2+	Configurable digital output 1 – negative pin		
12	OUT 2-	Configurable digital output 2 – positive pin		
16	OUT 3A	Configurable digital output 2 – negative pin		
17	OUT 3B	Configurable digital output 3 – polarity insensitive		
18	EXT_TRIG/PS A	Configurable digital output 3 – polarity insensitive		
19	EXT_TRIG/PS B	External trigger (polarity insensitive) for PS		
6	IN2/ENC A	External trigger (polarity insensitive) for PS		
10	IN2/ENC B	Input signal 2 (polarity insensitive) for Encoder		
14	IN3A	Input signal 2 (polarity insensitive) for Encoder		
15	IN4A	Input signal 3 (polarity insensitive)		
24	IN_REF	Input signal 4 (polarity insensitive)		
9, 13	VS	Common reference of IN3 and IN4 (polarity insensitive)		
23, 25, 26	GND	Supply voltage – positive pin		
		Supply voltage – negative pin		

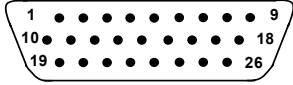


26-pin male D-sub Connector

Pin	RS232	RS485 Full-Duplex	RS485 Half-Duplex	20 mA C.L. (INT-30 with C-BOX 100 only)
2	TX	TX485+	RTX485+	see INT-30 instructions
3	RX	* RX485+		
4	RTS	TX485-	RTX485-	
5	CTS	* RX485-		
7	GND_ISO	GND_ISO	GND_ISO	


* Do not leave floating, see Reference Manual for connection details.

9-pin Lonworks Connector Pinout		
Pin	Name	Function
1	CHASSIS	Cable shield internally connected by capacitor to chassis
9	VS	Supply voltage – positive pin
2	GND	Supply voltage – negative pin
6	VS_I/O	Supply voltage of I/O circuit
3	Ref_I/O	Reference voltage of I/O circuit
4	SYS_ENC_I/O	System signal
5	SYS_I/O	System signal
7	LON A	Lonworks line (polarity insensitive)
8	LON B	Lonworks line (polarity insensitive)

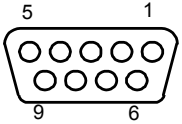


9-pin female Local Lonworks Connector

5-pin DeviceNet Connector Pinout		
Pin	Name	Function
2	V+	Supply voltage – positive pin
5	CAN_L	CAN bus data line – L
1	SHIELD	Shield
4	CAN_H	CAN bus data line – H
3	V-	Supply voltage – negative pin

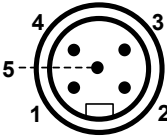


5-pin male DeviceNet Connector

 **NOTE** The power supplied on pin V+ and V- is used only to propagate power to the section of the DeviceNet board directly connected to the Bus. It is completely isolated from the DS6400 power which must be supplied on pin 9, 13 and pin 23, 25 of the 26-pin Main/Aux connector.


Connectivity:

Point-to-Point Layout

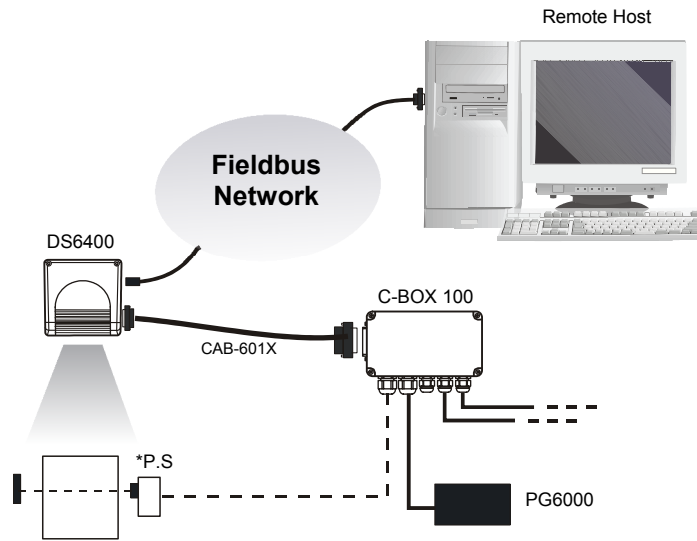

* P.S. (Presence Sensor) connected to External Trigger/PS input.


Pass Through Layout

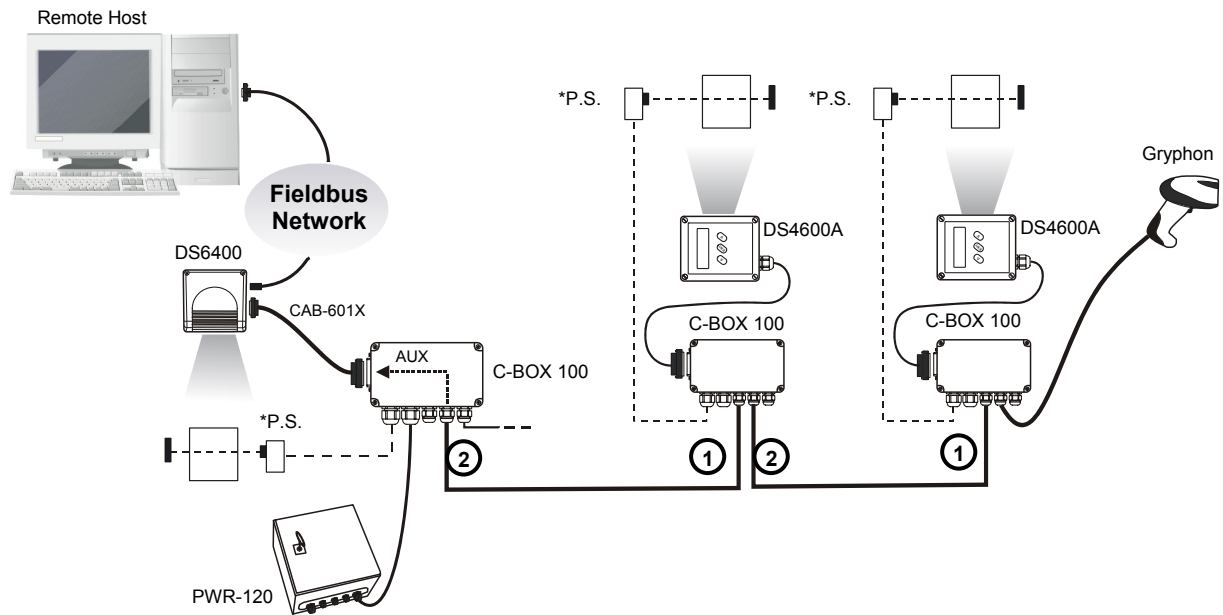

① Main Serial Interface ② Auxiliary Serial Interface

* P.S. (Presence Sensor) connected to External Trigger/PS input.

Local Lonworks Network

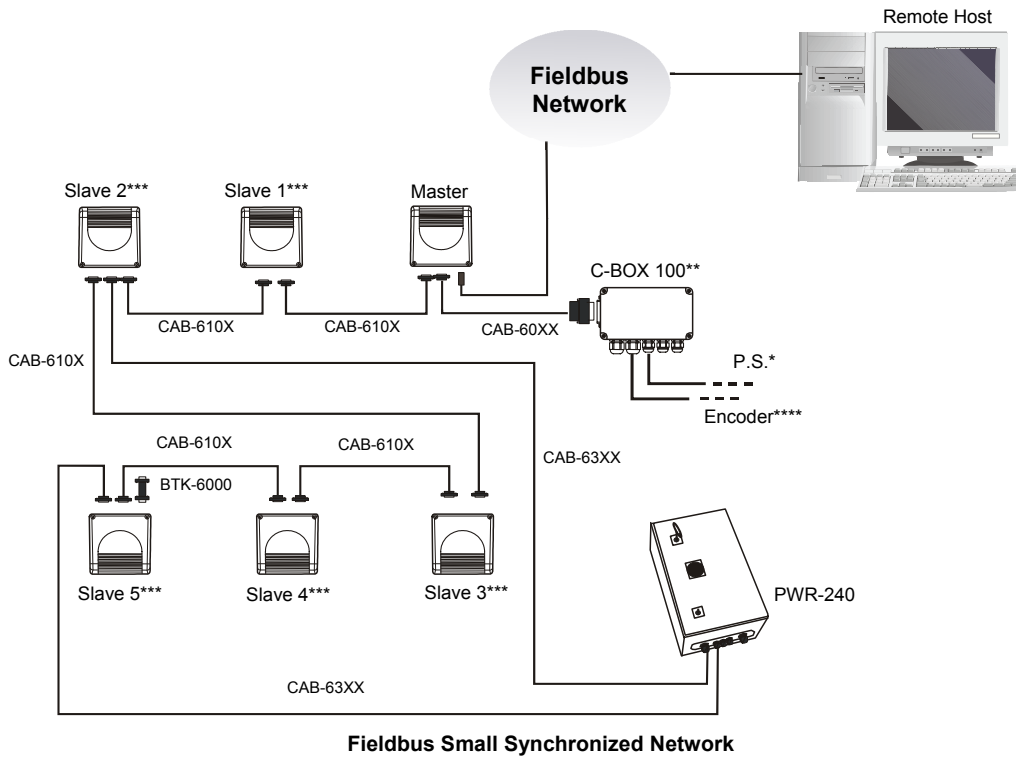

Fieldbus Small Synchronized Network

- * P.S. (Presence Sensor) connected to External Trigger/PS input.
- ** C-BOX 100 modified to accept scanner power.
- *** The Slave scanners are Master/Slave models, which allow Lonworks network propagation.
- **** Encoder connected to IN2/ENC input.

DS6400-105-0XX OSCILLATING MIRROR MODEL

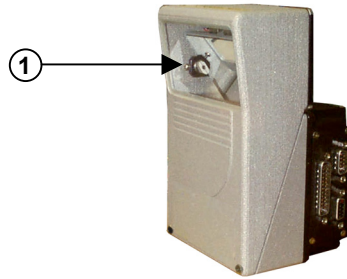


Figure A


① Laser Beam Output Window

Oscillating mirror models are used when coverage of a large reading area is required, mainly in picket fence applications.

The DS6400 scanner mounts a dedicated optic head with integrated oscillating mirror driven by a linear motor. The speed, precision, repeatability, and reliability of this driving technology assure high level performance.


The new oscillating mirror is completely software controlled and software programmable. The Genius™ software tool allows adjusting the linear motor speed (oscillating frequency) and the upper and lower limits of the oscillation by defining the top and bottom line limit angles.

When the oscillating mirror is programmed to read barcode labels at very small angles, position the reader to **assure at least 10°** for the Skew angle (see DS6400 Reference Manual). This angle refers to the most inclined or external laser line, so that all other laser lines assure more than 10° Skew. This avoids the direct reflection of the laser light emitted by the reader.

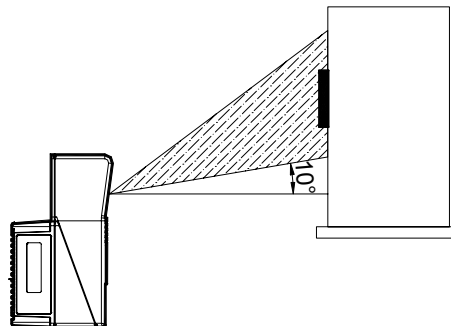

Oscillating Mirror Skew Angle

Otherwise, the scanner can be mounted at an angle of inclination of 17.5° in order to attain symmetrical deflection ranges.

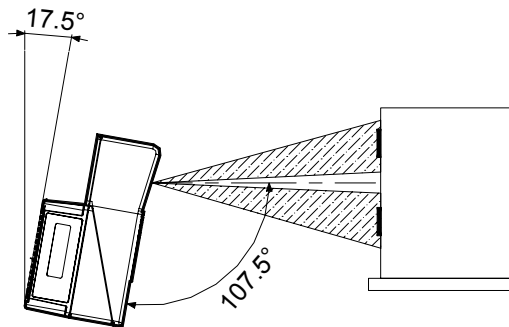

Oscillating Mirror Reading Position

In the above case, the zone where the scan line is perpendicular to the reflecting surface corresponds to a neutral zone at the center of the reading field.


The mirror can be deflected up to 40°. Oscillation with respect to the output window median axis is asymmetrical (see figure below).



Oscillating Mirror Maximum Aperture and Asymmetry

By configuring the oscillating speed up to the maximum value of 19 Hz, raster emulation can be performed for reading fast moving objects.

Hz	Max. Aperture
0-5	40°
6-10	30°
11-15	20°
16-19	10°




By limiting the raster width to the minimum necessary, the number of scans on the reading surface is increased.

NOTE

Oscillating angles are selected in software where the minimum and maximum angles correspond to -2.5° and +37.5°.


The scanner can be tilted in order for the 17.5° software setting to correspond with the 0° horizontal plane.

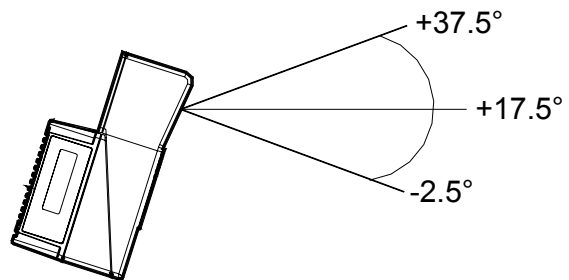

Oscillating Mirror Extreme Angle Positions

These models provide higher scanning speed (1200 scans/sec) compared to standard models and the reading performance is not adversely effected by the oscillating mirror.

The example represents the selection of an angle of +10° for the bottom line and an angle of +20° for the top line (see figure beside).

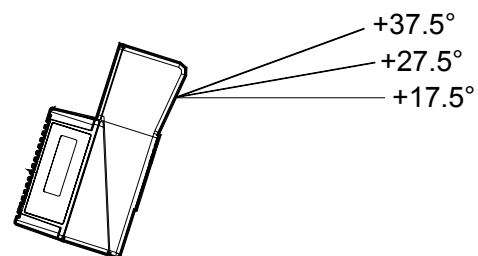

Oscillating Mode

COMMON FEATURES

C-BOX 100 Pinout for DS6400:

The table below gives the pinout of the C-BOX 100 terminal block connectors. Use this pinout when the DS6400 reader is connected in a network by means of the C-BOX 100:

C-BOX 100 Terminal Block Connectors				
Power				
1, 3, 5	VS			
2, 4, 6	GND			
7, 8	EARTH GROUND			
20, 40	Reserved			
Inputs				
27	EXT TRIG/PS A (polarity insensitive) for PS			
28	EXT TRIG/PS B (polarity insensitive) for PS			
29	IN 2/ENC A (polarity insensitive) for Encoder			
30	IN 2/ENC B (polarity insensitive) for Encoder			
31, 33	IN 3A (polarity insensitive)			
32, 34	IN 4A (polarity insensitive)			
36	IN 3B/IN 4B Reference (polarity insensitive)			
Outputs				
21	OUT 1+			
22	OUT 1-			
23	OUT 2+			
24	OUT 2-			
25	OUT 3A (polarity insensitive)			
26	OUT 3B (polarity insensitive)			
Auxiliary Interface				
35	TX AUX			
37	RX AUX			
38, 39	GND			
Main Interface				
	RS232	RS485 Full-Duplex	RS485 Half-Duplex	20 mA C.L. (with INT-30 only)
11, 15	TX 232	TX 485+	RTX 485+	see INT-30 instructions
12, 16	RTS 232	TX 485-	RTX 485-	
17	RX 232	* RX 485+		
18	CTS 232	* RX 485-		
10, 14, 19	SGND Main Isolated	SGND Main Isolated	SGND Main Isolated	
9, 13		RS485 Cable Shield	RS485 Cable Shield	


* Do not leave floating, see Reference Manual for connection details.

Mechanical Installation:

The DS6400 reader can be positioned and installed in the best way possible as a result of the Step-A-Head™ feature. Thanks to the separation between Head and Base, you can modify the orientation of the decoder base, and therefore display-keypad and connector panels, while keeping the optic head in the correct reading position. The reading head and the decoder base can be rotated independently from each other allowing the installation even in the most critical locations.


To rotate the head follow the given procedure:

1. detach the head from the base by unscrewing the four fixing screws;
2. rotate the head in the desired position;
3. loosen but don't remove the two screws on top of the head;
4. affix the head onto the base carefully aligning the four fixing screws and progressively tightening them about half-way;
5. completely tighten the two screws on top of the head;
6. completely tighten the four fixing screws.

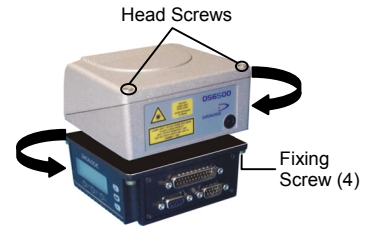


Step-A-Head™ Feature


The following diagrams give the overall dimensions of the reader standard model, oscillating mirror model and mounting bracket. They may be used for their installation:

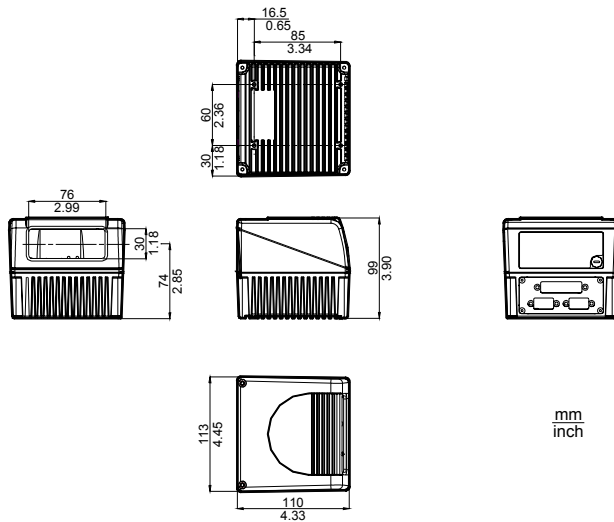


DS6400 Overall Dimensions

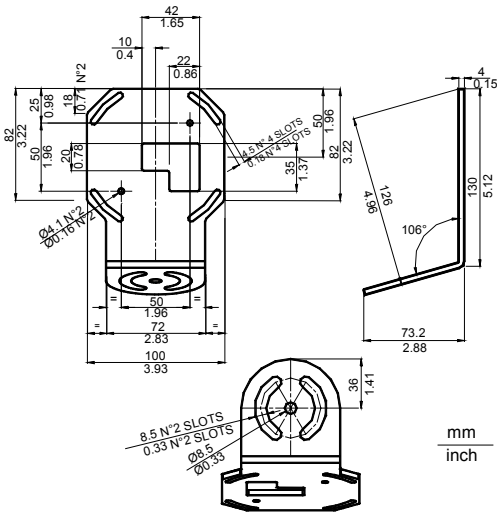

ST-237 Mounting Bracket Overall Dimensions

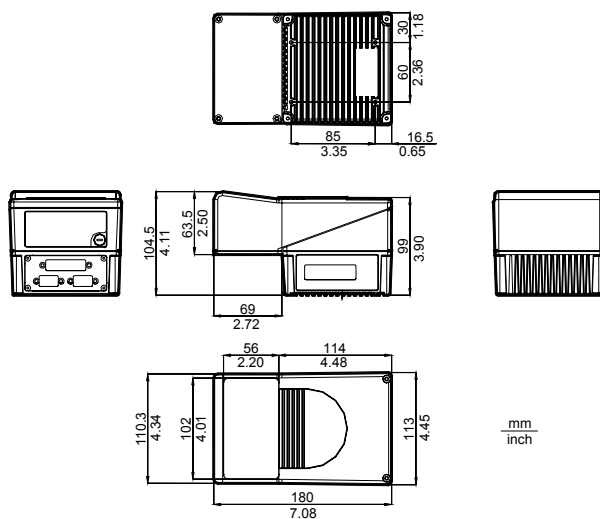

DS6400 Oscillating Mirror Model Overall Dimensions

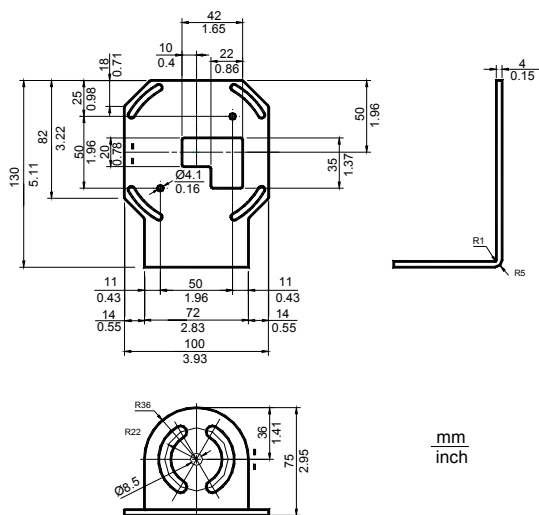


ST-210 Mounting Bracket Overall Dimensions

Typical Installations:


Standard Installation


The DS6400 scanner is mounted on the ST-237 106° mounting bracket which guarantees a built-in Skew angle (**S** in the figure below) of 16° with respect to the frame plane (typically the Skew angle should be between 10° - 20°). This avoids the direct reflection of the laser light emitted by the scanner. Furthermore, the bracket guides allow adjusting the Tilt angle (**T** in the figure below, which is typically 0°) for the best scanner orientation:

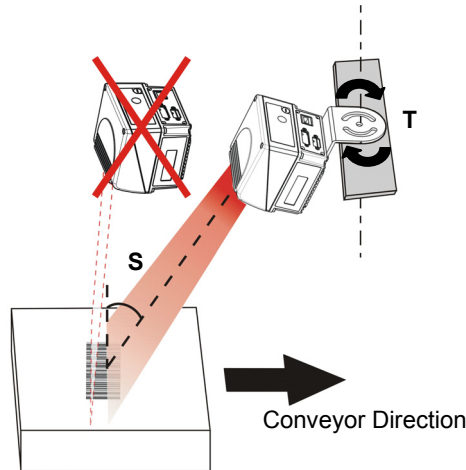


“45° Skew” Installation

The DS6400 scanner is mounted on the ST-210 90° mounting bracket. By adjusting the mounting bracket guides, reach 45° for the Skew angle (**S** in the figure below) to avoid the direct reflection of the laser light emitted by the scanner:

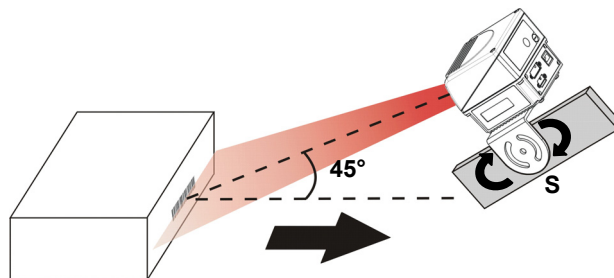




ATTENTION *If using the “45° Skew” installation, the scanner reading performance is not guaranteed to match that measured for the standard installation with Skew angle between 10° - 20° (see reading diagram section).*



NOTE *The ST-210 mounting bracket is an accessory of the DS6400 standard model available in the US-60 kit (order no. 890001020).*



WARNING *When installing several scanners, take care to position them correctly so that no laser beam enters the reading window perpendicularly and at the same level of the output beam of the other scanners. This condition could occur more frequently for side mounted applications. If these precautions are not followed, it may occur that the laser of the blinded scanner starts blinking due to an internal circuit which temporarily turns the laser off when detecting a power anomaly. To resolve this problem, it is sufficient to slightly change the inclination and position of one of the two scanners involved.*

FLASH™ Dynamic Focus:

The DS6400 has an innovative linear motor designed to control the focus position of the scanner via software. This dynamic system, called FLASH™, is able to move the focus position rail to rail, from the minimum position to the maximum position.

The FLASH™ functionalities (i.e. the driving modes of the linear motor) are programmed via the Genius™ software tool and can operate in the following modes:

- Fixed mode: the focus is set to the desired position via software (expressed in cm);
- Continuous mode: the focus position is continuously running from a minimum position to a maximum position with a defined frequency;
- Triggered mode: the focus position can be set depending on the received external input (photocell, barrier, serial message);
- D-Flash™ mode: the focus position can be set depending on the measured distance between the scanner and the scanned object. This is the most innovative and flexible function, that makes different software implementations possible. The D-Flash™ development has been based on the minimum distance detected. Thus, it can solve the main part of the applications. Further developments of D-Flash™ will be provided according to the specific application needs.

Reading Conditions:

- ANSI Grade B minimum
- 800 scans/sec

The following tables describe the requirements for standard applications.

Conveyor Speed (m/s)		Minimum Code Height for ACR Reading (mm)											
		45°						30°					
		0.5	1	1.5	2	2.5	3	0.5	1	1.5	2	2.5	3
2/5 Interleaved Code Resolution (mm)	0.25	10	12	14	16	18	20	7	9	10	12	13	15
	0.30	12	14	15	17	19	21	8	9	11	12	14	15
	0.33	13	14	16	18	20	22	8	10	11	13	14	16
	0.38	14	16	18	19	21	23	9	11	12	14	15	17
	0.50	18	19	21	23	25	26	11	12	14	15	17	18
	0.72	24	25	27	28	30	32	15	16	17	19	20	22
	1.00	33	34	35	36	38	40	20	21	22	23	25	26

Ratio 3:1

Table 1

Conveyor Speed (m/s)		Minimum Code Height for ACR Reading (mm)											
		45°						30°					
		0.5	1	1.5	2	2.5	3	0.5	1	1.5	2	2.5	3
Code 39 Code Resolution (mm)	0.25	9	10	12	14	16	17	6	7	9	10	12	13
	0.30	10	11	13	15	17	18	7	8	9	11	12	14
	0.33	11	12	13	15	17	19	7	8	10	11	13	14
	0.38	12	13	14	16	18	20	8	9	10	12	13	15
	0.50	15	16	17	18	20	22	10	10	11	13	14	16
	0.72	20	21	22	23	24	26	13	13	14	15	17	18
	1.00	27	28	29	30	31	32	17	17	18	19	20	21

Ratio 3:1; Interdigit = Module Size

Table 2

Conveyor Speed (m/s)		Minimum Code Height for ACR Reading (mm)											
		45°						30°					
		0.5	1	1.5	2	2.5	3	0.5	1	1.5	2	2.5	3
Code 128 – Ean 128 Code Resolution (mm)	0.25	8	9	11	13	15	17	5	7	8	10	11	13
	0.30	8	10	12	14	16	18	6	7	9	10	12	13
	0.33	9	11	13	14	16	18	6	8	9	11	12	14
	0.38	10	11	13	15	17	19	7	8	10	11	13	14
	0.50	12	13	15	17	19	21	8	9	11	12	14	15
	0.72	16	17	19	21	22	24	10	11	13	14	16	17
	1.00	22	23	24	25	27	29	13	14	15	17	18	20

Table 3

Conveyor Speed (m/s)		Minimum Code Height for ACR Reading (mm)											
		45°						30°					
		0.5	1	1.5	2	2.5	3	0.5	1	1.5	2	2.5	3
Codabar Code Resolution (mm)	0.25	8	9	11	13	15	17	5	7	8	10	11	13
	0.30	9	10	12	14	16	18	6	7	9	10	12	13
	0.33	9	11	13	14	16	18	6	8	9	11	12	14
	0.38	10	11	13	15	17	19	7	8	10	11	13	14
	0.50	13	14	15	17	19	21	8	9	11	12	14	15
	0.72	17	18	19	21	22	24	11	12	13	14	16	17
	1.00	23	24	25	26	27	29	14	15	16	17	18	20

Ratio 3:1; Interdigit = Module Size

Table 4

Conveyor Speed (m/s)		Minimum Code Height for ACR Reading (mm)											
		45°						30°					
		0.5	1	1.5	2	2.5	3	0.5	1	1.5	2	2.5	3
EAN 8-13, UPC-A Code Resolution (mm)	0.25	7	9	10	12	14	16	5	6	8	9	11	12
	0.30	8	9	11	13	15	17	6	7	8	10	11	13
	0.33	9	10	11	13	15	17	6	7	9	10	12	13
	0.38	10	11	12	14	16	18	7	7	9	10	12	13
	0.50	12	13	14	15	17	19	8	9	10	11	13	14
	0.72	16	17	18	19	20	22	10	11	12	13	14	16
	1.00	22	23	24	24	25	26	13	14	15	16	16	18

Table 5


Reading Diagrams:

In the following reading diagrams (0,0) is the center of the laser beam output window.

DS6400-100-0XX – Resolution: 0.20 mm/8 mils


CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

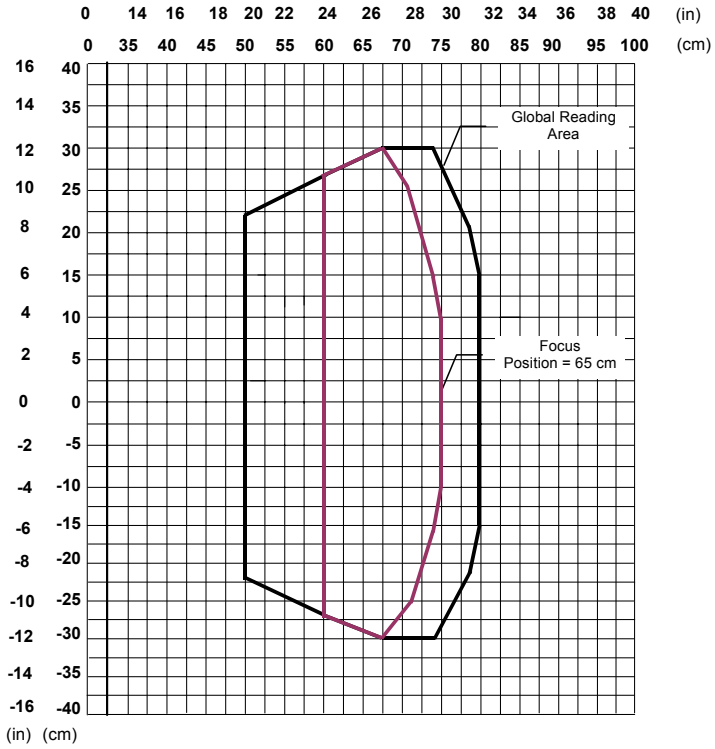

Reading distance

(in) (cm)

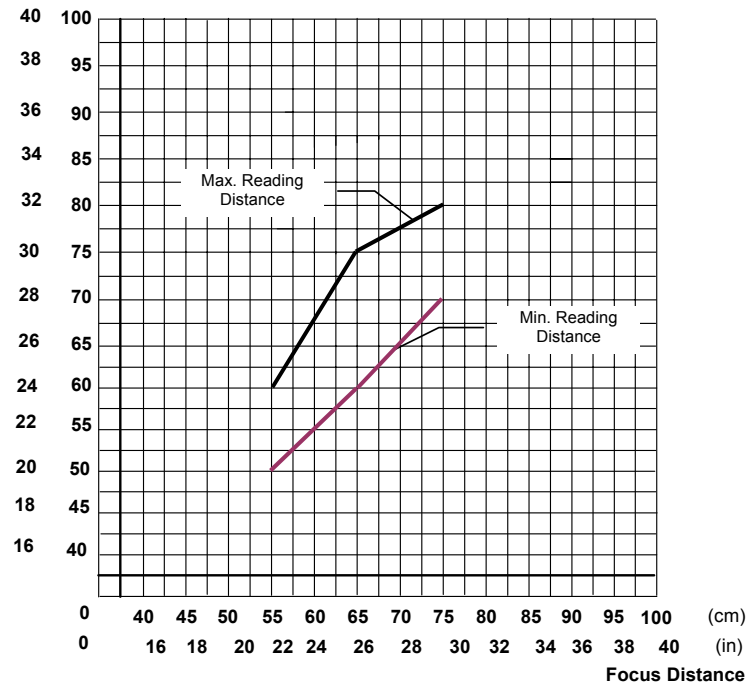


Reading Diagrams:


DS6400-100-0XX – Resolution: 0.25 mm/10 mils

CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

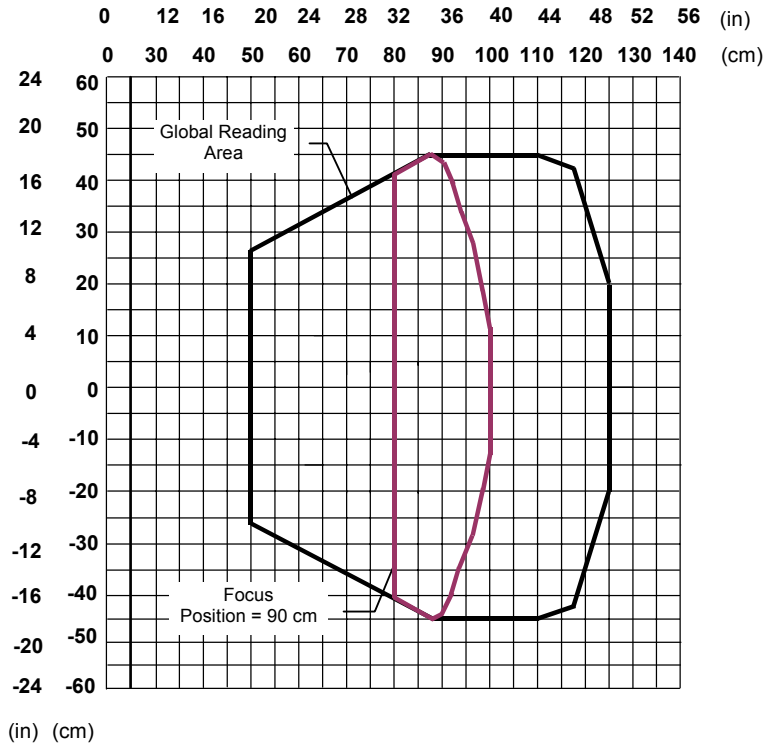

Reading distance

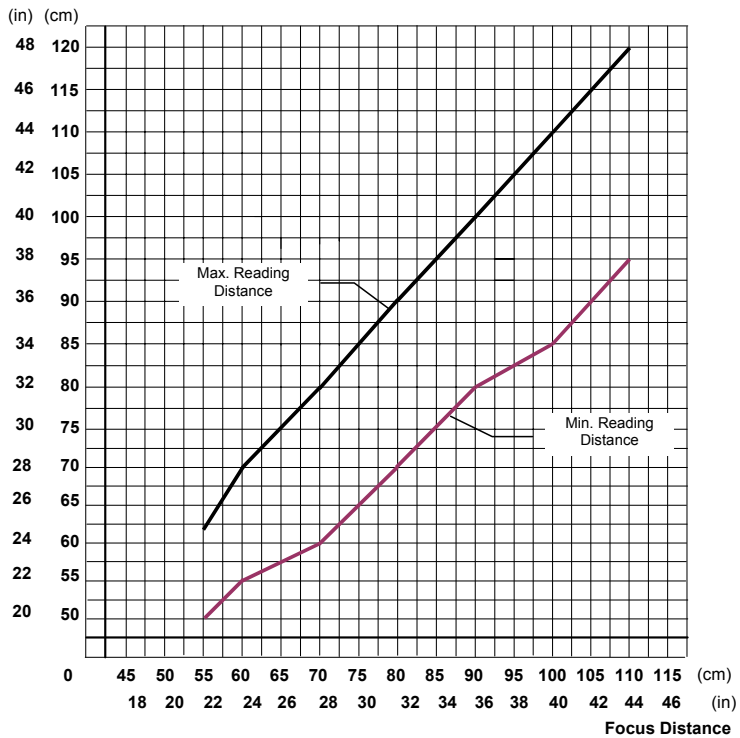

Reading Diagrams:

DS6400-100-0XX – Resolution: 0.30 mm/12 mils

CONDITIONS


Code = Interleaved 2/5 or Code 39

PCS = 0.90


Pitch angle = 0°

Skew angle = 10° - 20°

Tilt angle = 0°

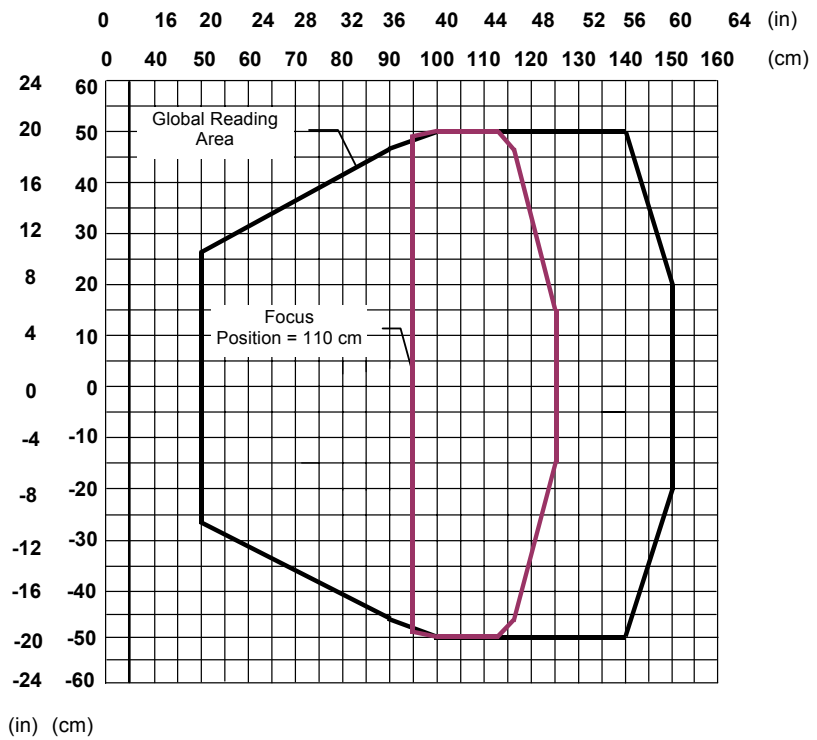

Reading distance

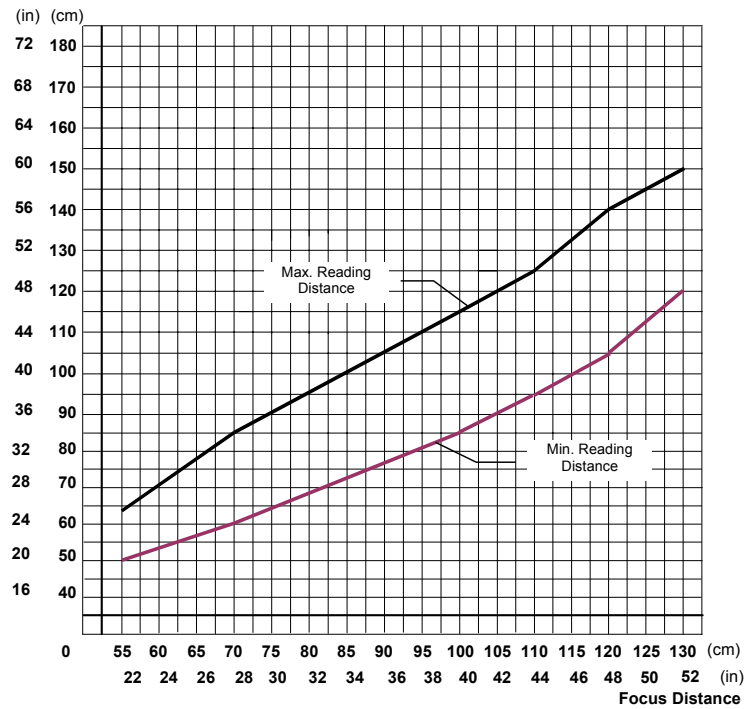


Reading Diagrams:


DS6400-100-0XX – Resolution: 0.38 mm/15 mils

CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

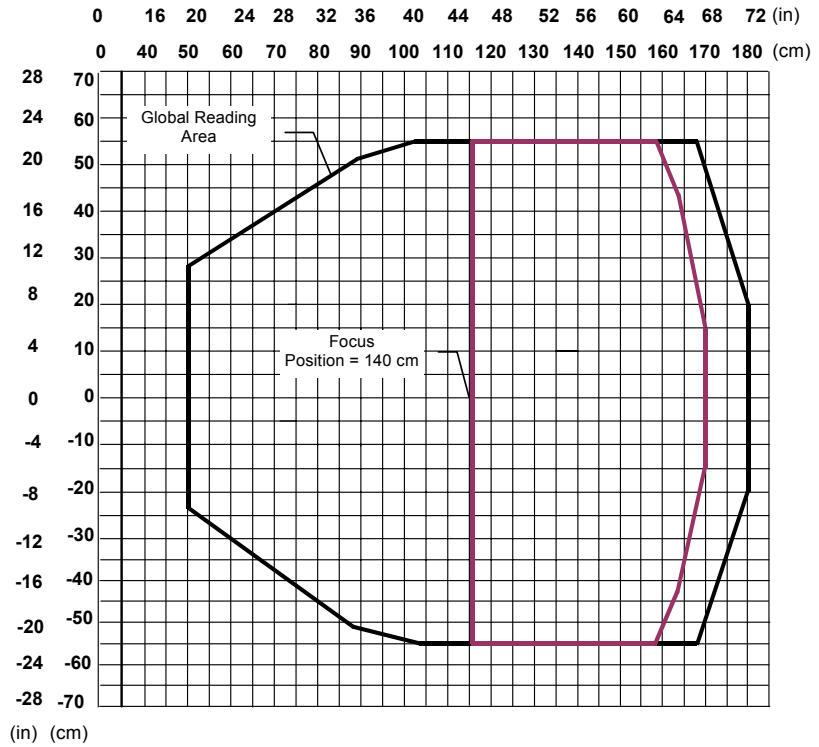

Reading distance

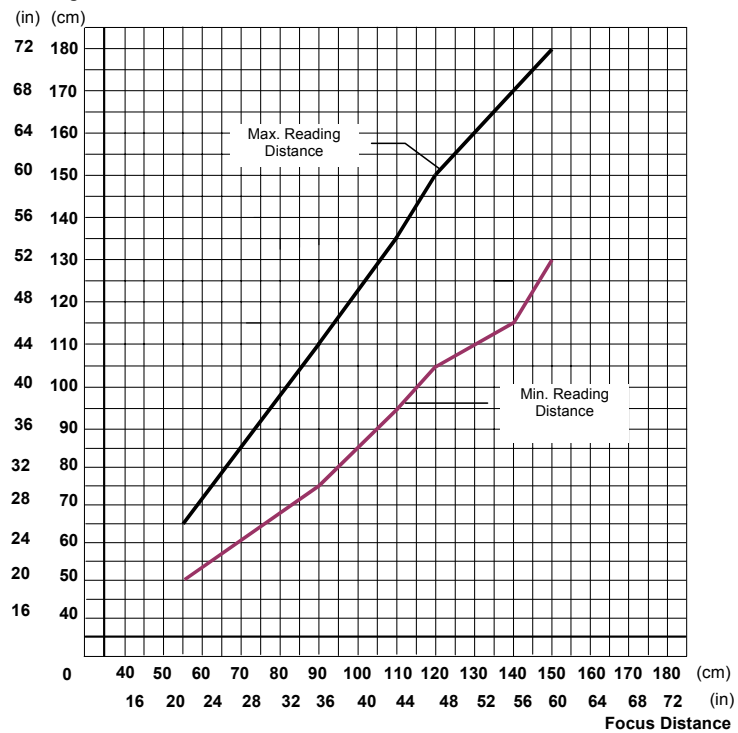


Reading Diagrams:


DS6400-100-0XX – Resolution: 0.50 mm/20 mils

CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

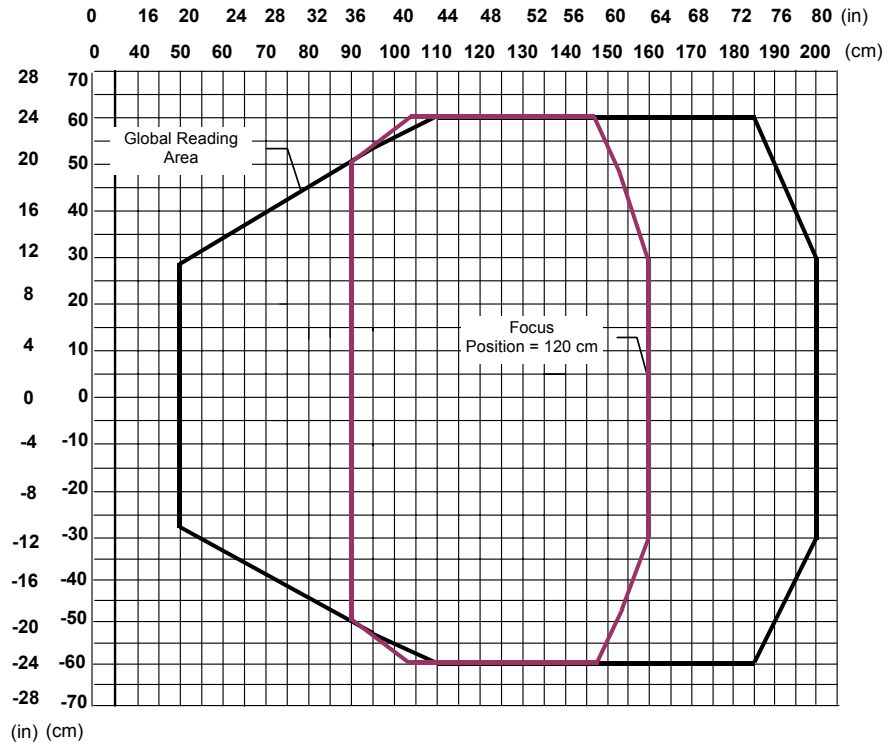

Reading distance
(in) (cm)

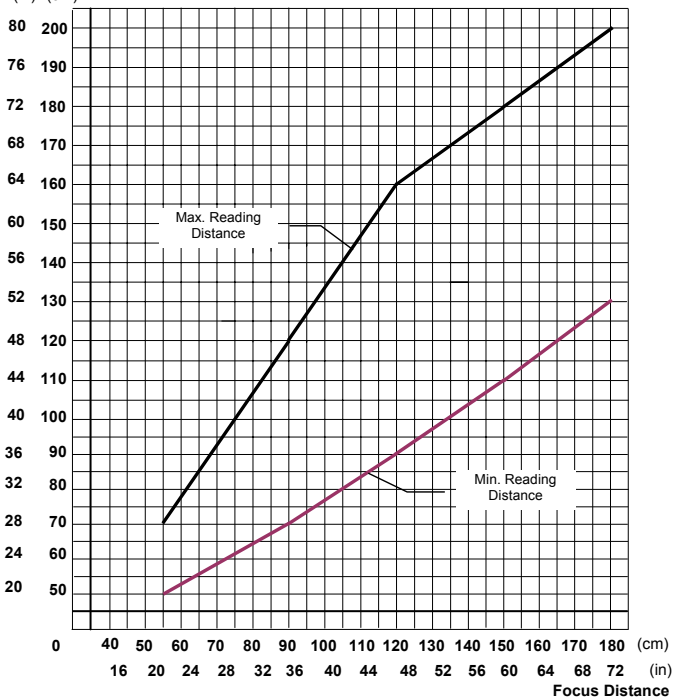

Reading Diagrams:

DS6400-105-0XX (Oscillating Mirror) – Resolution: 0.20 mm/8 mils

CONDITIONS


Code = Interleaved 2/5 or Code 39

PCS = 0.90


Pitch angle = 0°

Skew angle = 10° - 20°

Tilt angle = 0°

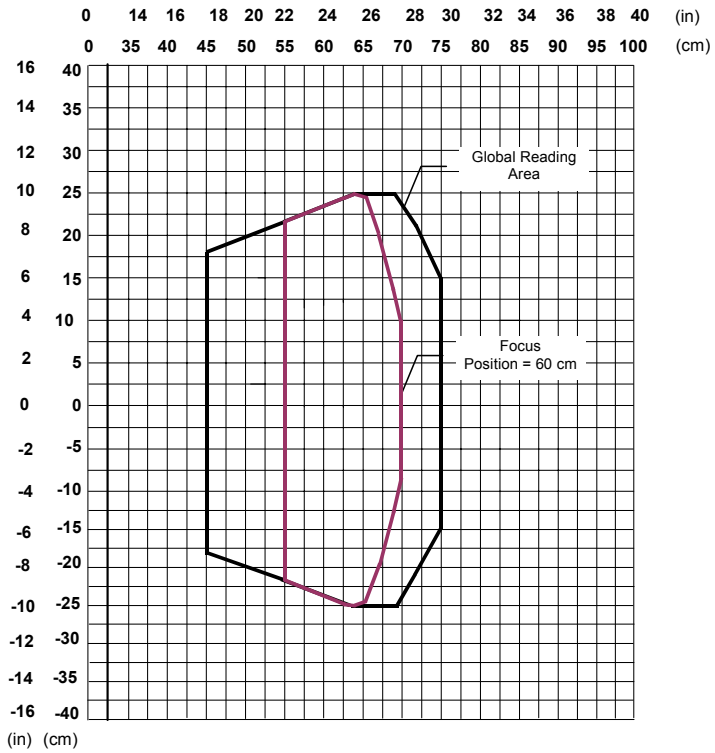

Reading distance

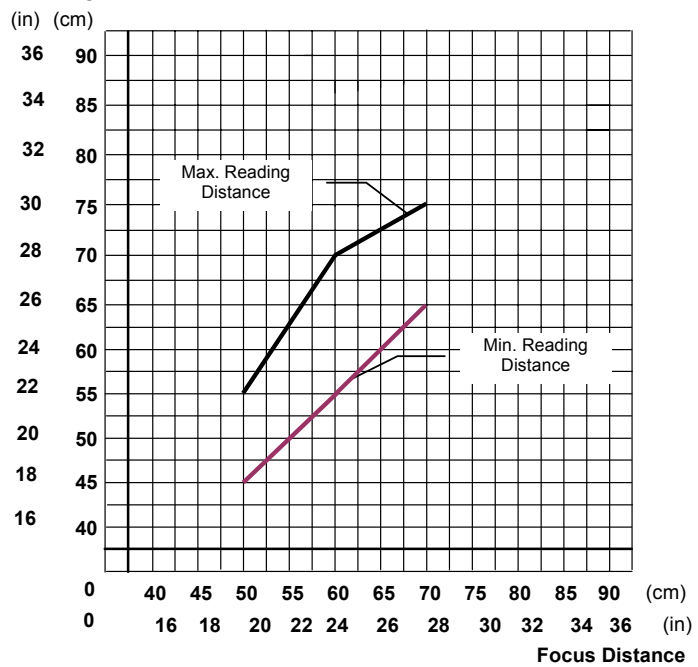


Reading Diagrams:

DS6400-105-0XX (Oscillating Mirror) – Resolution: 0.25 mm/10 mils


CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

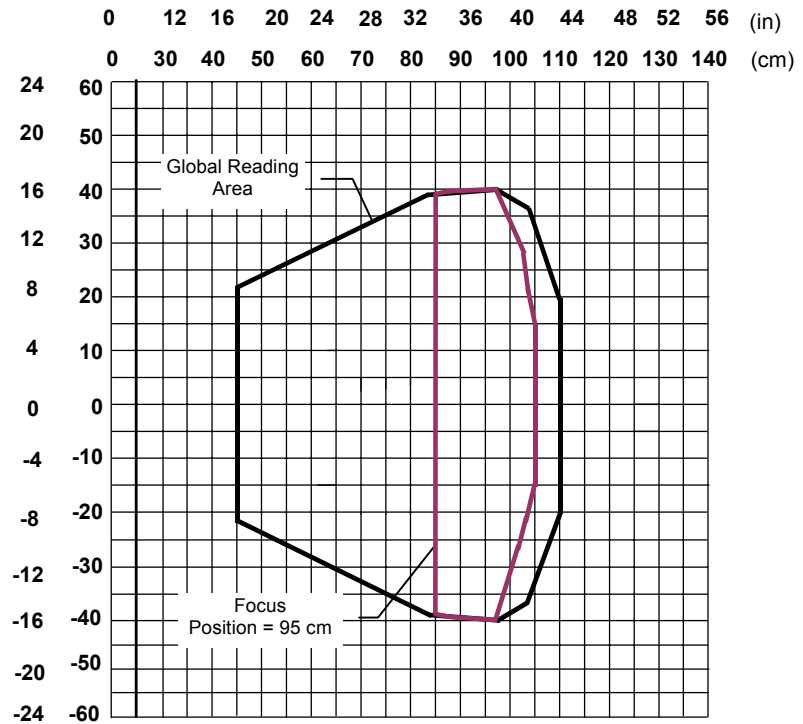

(in) (cm)

Reading distance

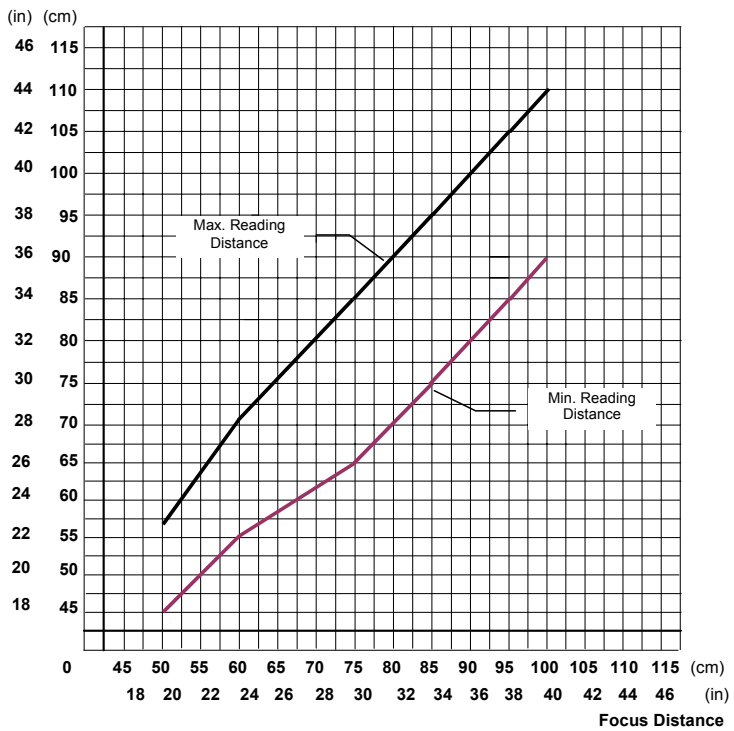

Reading Diagrams:


DS6400-105-0XX (Oscillating Mirror) – Resolution: 0.30 mm/12 mils

CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°



Reading distance
(in) (cm)

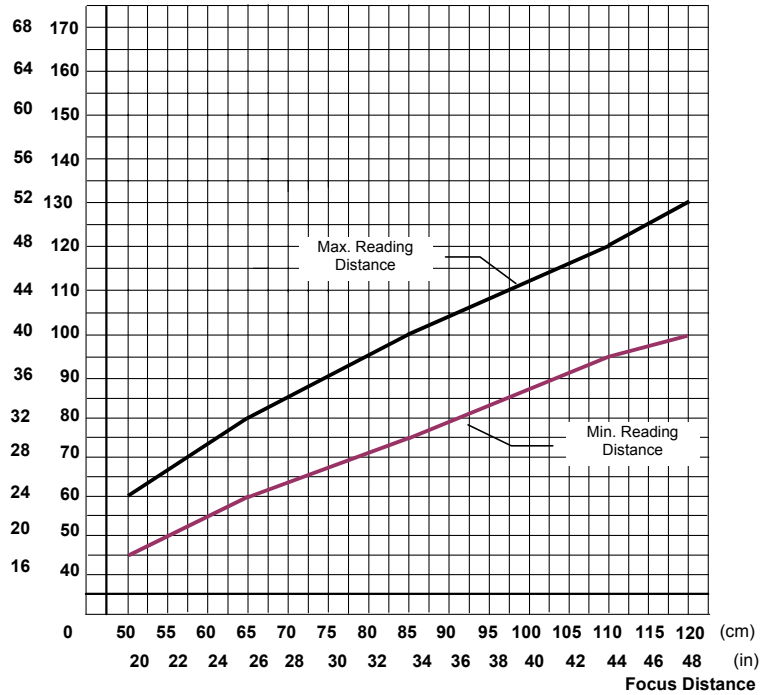


Reading Diagrams:


DS6400-105-0XX (Oscillating Mirror) – Resolution: 0.38 mm/15 mils

CONDITIONS

- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

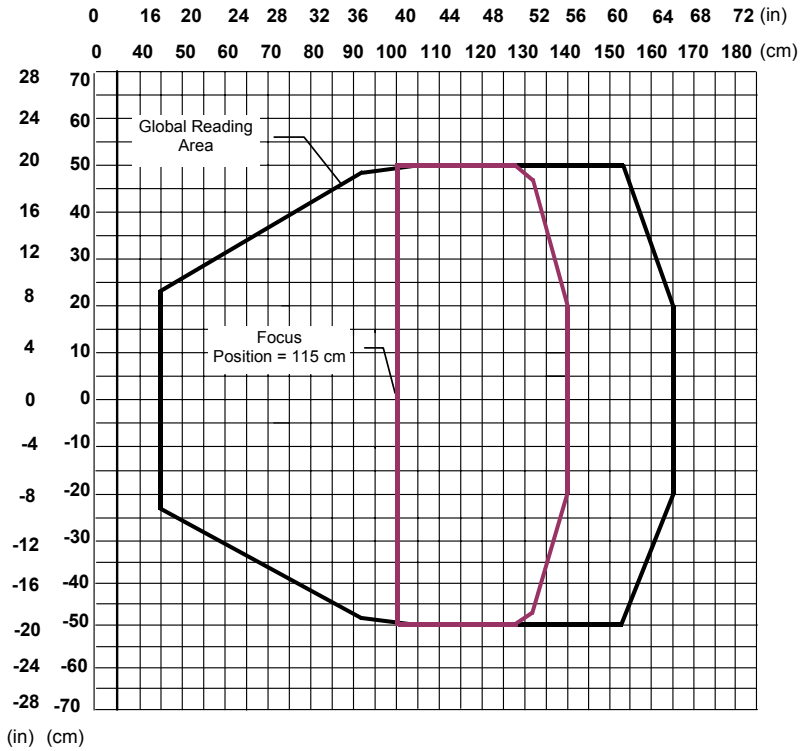

Reading distance

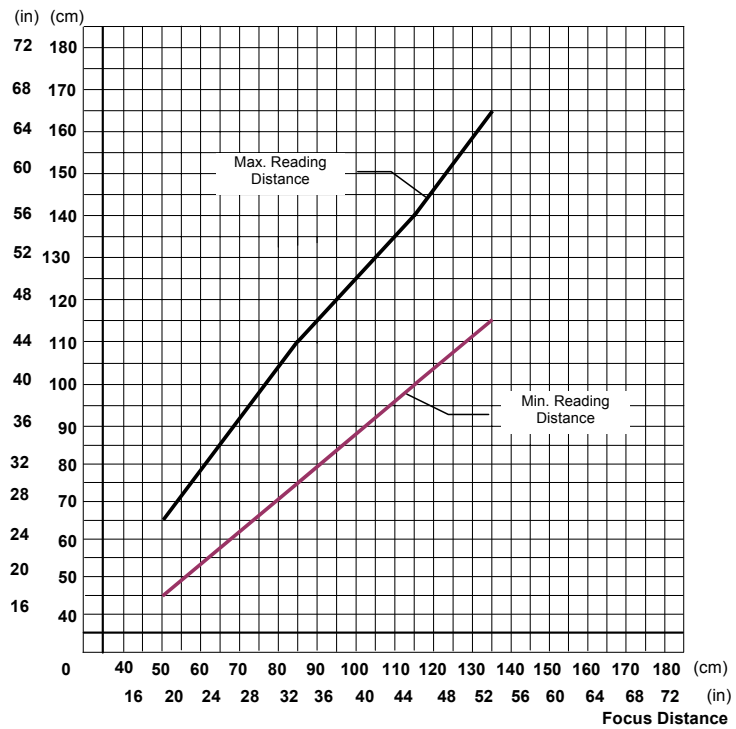


Reading Diagrams:


DS6400-105-0XX (Oscillating Mirror) – Resolution: 0.50 mm/20 mils

CONDITIONS



- Code = Interleaved 2/5 or Code 39
- PCS = 0.90
- Pitch angle = 0°
- Skew angle = 10° - 20°
- Tilt angle = 0°

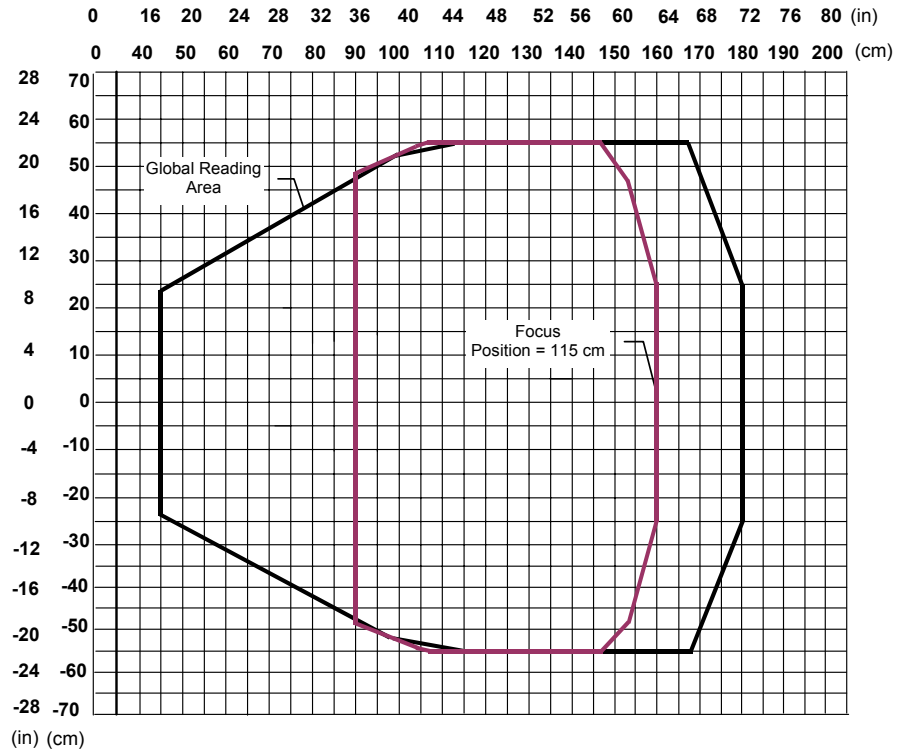

Reading distance
(in) (cm)

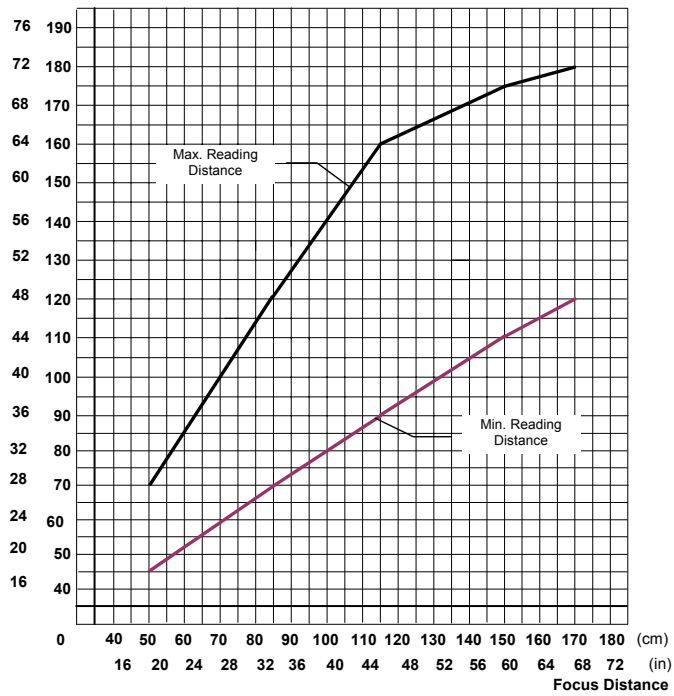


User Interface:

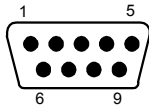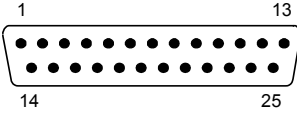RS232 PC-side connections			
 <p>9-pin male connector</p>		 <p>25-pin male connector</p>	
Pin	Name	Pin	Name
2	RX	3	RX
3	TX	2	TX
5	GND	7	GND
7	RTS	4	RTS
8	CTS	5	CTS

How To Build A Simple Interface Test Cable:

The following wiring diagram shows a simple test cable including power, external (push-button) trigger and PC RS232 COM port connections.

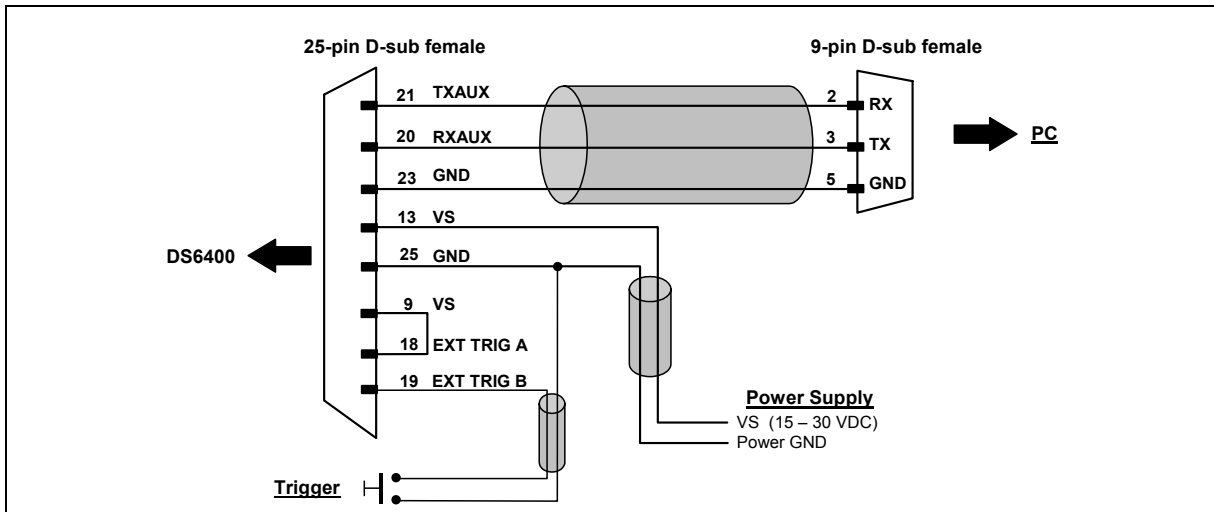

Compliance:

Laser Safety

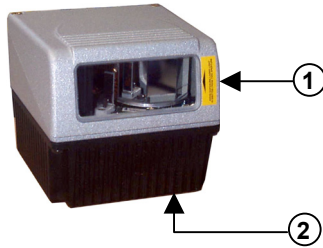


Figure A

- ① Laser Safety Label
- ② Identification Label

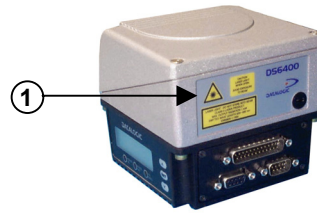


Figure B

- ① Warning and Device Class Label

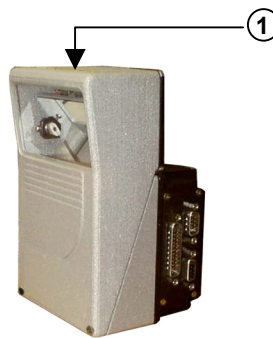


Figure C


- ① Laser Safety Label

The scanner is classified as a Class 2 laser product according to EN 60825-1 regulations and as a Class II laser product according to CDRH regulations.


Disconnect the power supply when opening the device during maintenance or installation to avoid exposure to hazardous laser light.

There is a safety device which allows the laser to be switched on only if the motor is rotating above the threshold for its correct scanning speed.

The laser beam can be switched off through a software command (see also the Genius™ Help On-Line).



Laser Safety Label for Oscillating Mirror and Standard Models

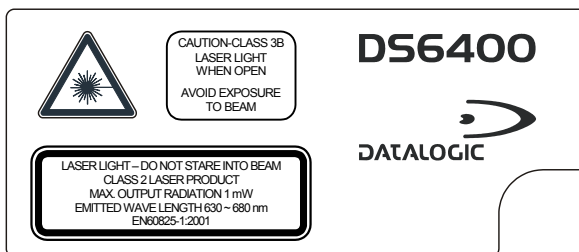

Warning and Device Class Label



Device Identification Label

The laser diode used in this device is classified as a Class 3B laser product according to EN 60825-1 regulations and as a Class IIIb laser product according to CDRH regulations. Any violation of the optic parts in particular can cause radiation up to the maximum level of the laser diode (35 mW at 630 ~ 680 nm).

Power Supply

- **This product is intended to be installed by Qualified Personnel only.**
- **All DS6400 Models:**
This device is intended to be supplied by a UL Listed Power Unit marked "Class 2" or LPS power source which supplies power directly to the scanner via the 25/26-pin connector.

CE Compliance**Warning:**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Patents

This product is covered by one or more of the following patents:

U.S. patents: 5,483,051; Re. 36,251; 6,049,406; 5,992,740; 6,347,740B1; 6,629,639B2; 6,394,352B1; 6,742,710B2; 7,161,685B1; 6,688,524B1; 6,443,360 B1; 7,195,162B2.

European patents: 652,530B1; 786,734B1; 789,315B1; 851,376B1; 1,363,228B1; 959,426B9; 1,300,798B1.

Additional patents pending.

Datalogic Automation S.r.l.
Via S. Vitalino 13
40012 - Lippo di Calderara
Bologna - Italy

dichiara che
 declares that the
 déclare que le
 bescheinigt, daß das Gerät
 declare que el

DS6400-XXX-XXX, Laser Scanner; e tutti i suoi modelli
 and all its models
 et tous ses modèles
 und seine Modelle
 y todos sus modelos

sono conformi alle Direttive del Consiglio Europeo sottoelencate:
 are in conformity with the requirements of the European Council Directives listed below:
 sont conformes aux spécifications des Directives de l'Union Européenne ci-dessous:
 der nachstehend angeführten Direktiven des Europäischen Rats:
 cumple con los requisitos de las Directivas del Consejo Europeo, según la lista siguiente:

89/336/EEC EMC Directive	e	92/31/EEC, 93/68/EEC	emendamenti successivi
	and		further amendments
	et		ses successifs amendements
	und		späteren Abänderungen
	y		sucesivas enmiendas

2006/95/EC Low Voltage Directive

Basate sulle legislazioni degli Stati membri in relazione alla compatibilità elettromagnetica ed alla sicurezza dei prodotti.
 On the approximation of the laws of Member States relating to electromagnetic compatibility and product safety.
 Basée sur la législation des Etats membres relative à la compatibilité électromagnétique et à la sécurité des produits.
 Über die Annäherung der Gesetze der Mitgliedsstaaten in bezug auf elektromagnetische Verträglichkeit und Produktsicherheit entsprechen.
 Basado en la aproximación de las leyes de los Países Miembros respecto a la compatibilidad electromagnética y las Medidas de seguridad relativas al producto.

Questa dichiarazione è basata sulla conformità dei prodotti alle norme seguenti:
 This declaration is based upon compliance of the products to the following standards:
 Cette déclaration repose sur la conformité des produits aux normes suivantes:
 Diese Erklärung basiert darauf, daß das Produkt den folgenden Normen entspricht:
 Esta declaración se basa en el cumplimiento de los productos con las siguientes normas:

EN 55022 (Class A ITE), August 1994: Amendment A1 (Class A ITE), October 2000:	LIMITS AND METHODS OF MEASUREMENTS OF RADIO DISTURBANCE CHARACTERISTICS OF INFORMATION TECHNOLOGY EQUIPMENT
EN 61000-6-2, October 2001:	ELECTROMAGNETIC COMPATIBILITY (EMC) PART 6-2: GENERIC STANDARDS - IMMUNITY FOR INDUSTRIAL ENVIRONMENTS
EN 60950-1, December 2001:	INFORMATION TECHNOLOGY EQUIPMENT – SAFETY – PART 1: GENERAL REQUIREMENTS
EN 60825-1, June 1994: Amendments A11 (1996), A2 (2001):	SAFETY OF LASER PRODUCTS – PART 1: EQUIPMENT CLASSIFICATION, REQUIREMENTS AND USER'S GUIDE

Lippo di Calderara, April 2nd, 2007

Lorenzo Girotti
 Product & Process Quality Manager

