



OM2000N

INSTALLATION MANUAL

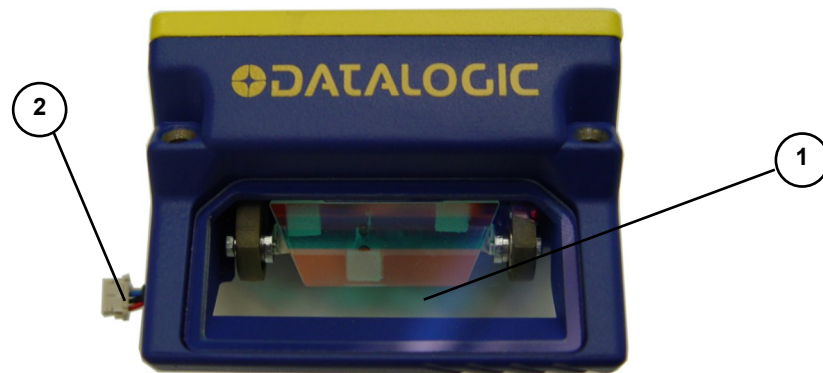


Figure A

- ① Laser Beam Output Window
- ② Power Cable

DESCRIPTION

The OM2000N oscillating mirror is an accessory for the 2000N family laser scanners: DS2100N, DS2400N. It is designed to generate homogeneous and adjustable raster reading through deflection of the scanning laser beam.

The system consists of the oscillating mirror attached to the scanner and allows a surface instead of a line to be observed; versatility and reading accuracy are therefore increased in "Picket Fence" reading mode.

Some examples are given in the following cases: codes presented at different "heights" on the reading surface; codes with printing defects.

The electronic and electromechanical components controlling the mirror movement are contained inside the rugged metal casing, which guarantees protection class IP65 when the OM2000N is mounted correctly onto the scanner.

The OM2000N is directly powered from the scanner through a connector which is accessible after removing the scanning window (see assembly instructions on page 3). It therefore operates exclusively at low power, between 10 and 30 VDC.

MECHANICAL INSTALLATION

When opening the packaging, verify that the OM2000N oscillating mirror is complete with a set of fixture screws.

MECHANICAL DIMENSIONS

The following figure gives the overall dimensions of the OM2000N and may be used for its installation.

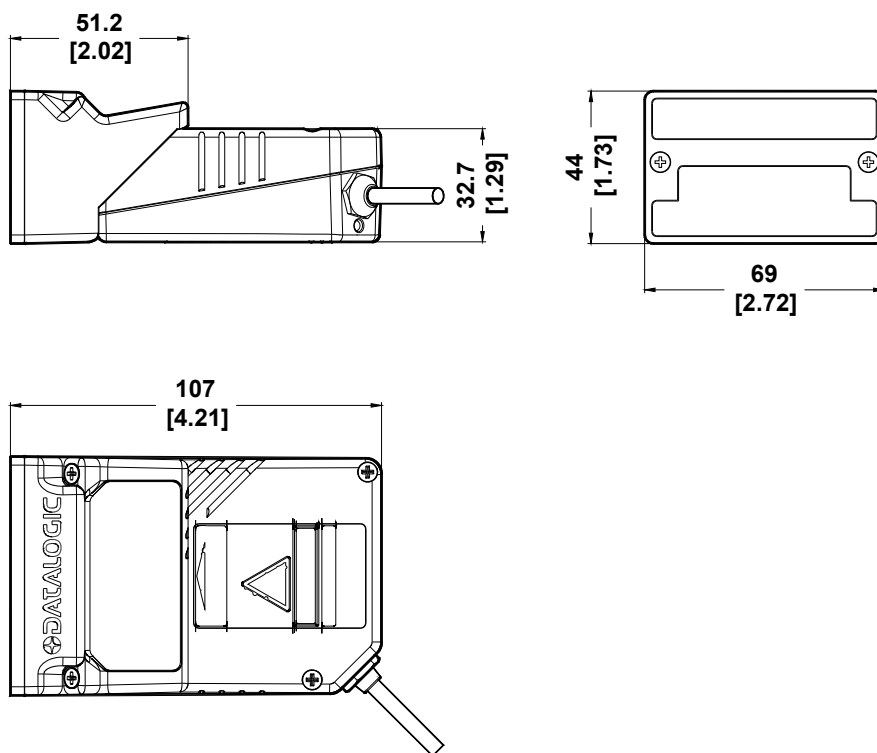


Figure 1 – Overall Dimensions

ASSEMBLY TO THE SCANNER

- 1) Clean the OM2000N mirror surface and output window (internally and externally) with a clean soft cloth and alcohol before assembling it to the scanner.



CAUTION

All abrasive substances must be absolutely avoided as they cause irreparable damage to the transparency of the glass.

- 2) Remove the scanning window from the scanner (see Figure 2).

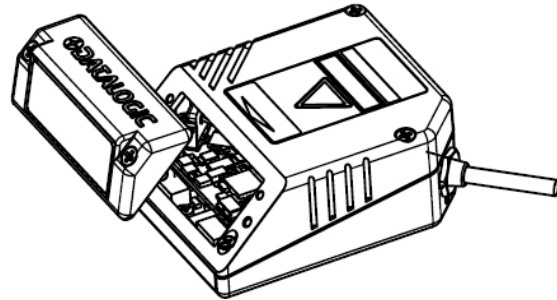


Figure 2

- 3) Bring the OM2000N close to the scanner and insert the cable into the power connector of the scanner (See Figure 3).

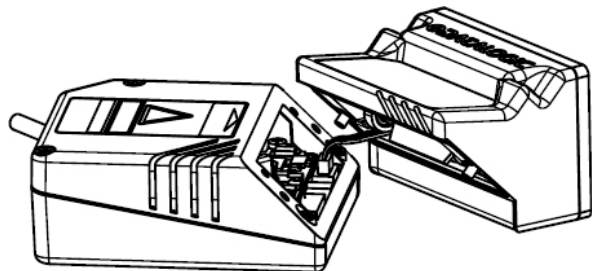


Figure 3



NOTE

Make sure the cable doesn't remain in the path of the mirror movement.

- 4) Check that the seal is correctly positioned and then after having aligned the OM2000N onto the scanner, fix it using the two screws (see Figure 4).

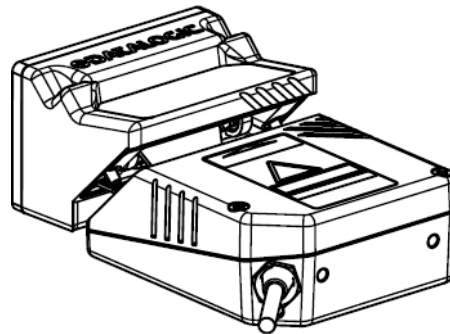


Figure 4

- 5) In the indicated space on the front side of the OM2000N, apply the relative replicate scanner serial number label provided with the scanner itself (see Figure 5).



Figure 5

READING FEATURES

The reading distance of the 2000 series scanner with the OM2000N is shifted by 10 mm towards the scanner because of the internal optical path between the scanner and the OM2000N output window.

The reading performance also decreases in typical conditions by about 10% due to the optical signal passing through the output window of the OM2000N and the reflection on the mirror surface.

The combination of these effects produces the reading diagram represented below:

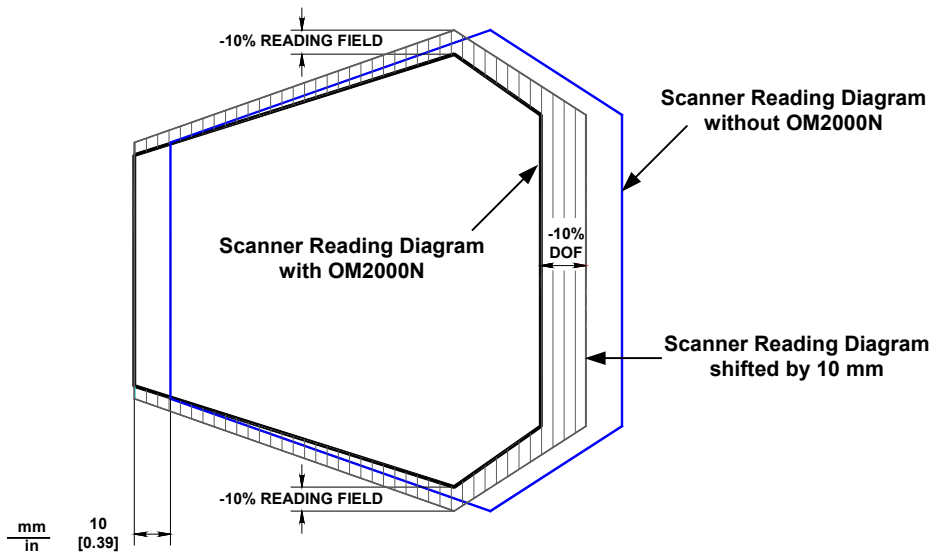


Figure 5 – OM2000N Reading Performance Comparison

The reading distance also depends on the amplitude of aperture used. In particular, wider apertures require the scanner to be closer to the code in order to read at the extreme edges of the sweep (see figure 6 below).

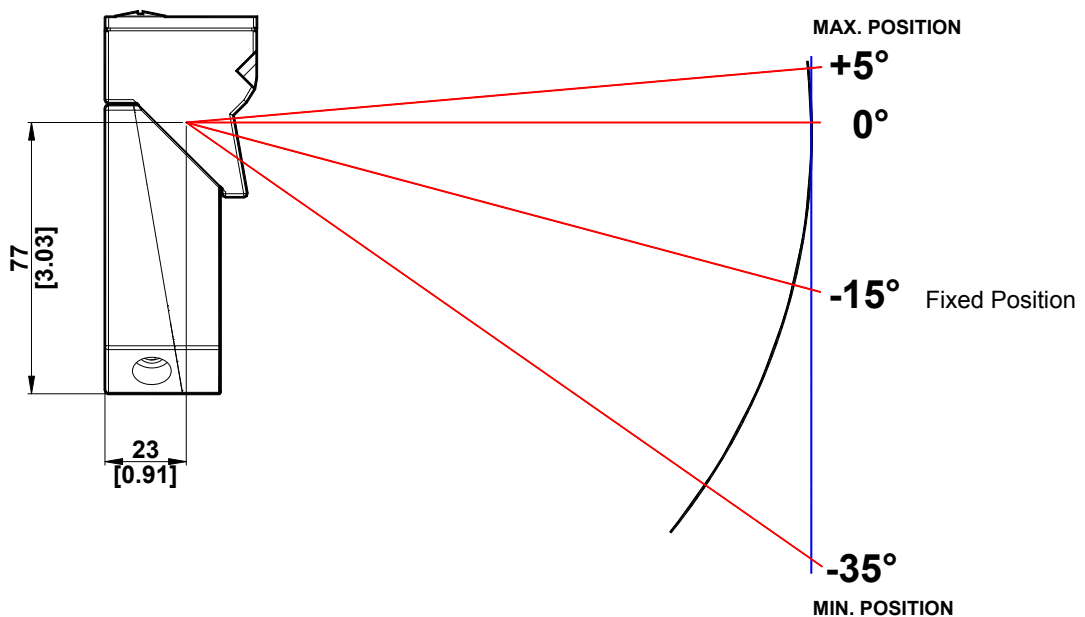


Figure 6 – OM2000N Reading Distance

CONFIGURATION



NOTE

The OM2000N must be mounted to a DS2x00N scanner and is configurable exclusively through the Genius™ utility program. The DS2x00N scanner must have software version 2.03 or later.



NOTE

When entering the X-PRESS™ interface on the DS2x00N, the Oscillating Mirror remains in the default **fixed position** (-15°) in order to make barcode reading easier while performing the X-PRESS™ functions.

The following software configuration parameters are available through Genius™ and described below for reference:

Oscillating Mode

This parameter defines the oscillating mode of the scanner mirror:

Selections: (OM2000N only) **Fixed** the oscillating mirror deflects the scan line at a fixed angle of deflection (-15°).
 (OM2000N only) **Continuous** the scan line is deflected according to the Amplitude and Frequency settings.

Amplitude (degrees)

This parameter is available only when working in Continuous oscillating mode. It defines the deflection range in degrees as a symmetrical oscillation with respect to the fixed angle (-15°).

Selections: a value from **10°** to **40°**:

Frequency (Hz)

This parameter is available only when working in Continuous oscillating mode. It defines the oscillating frequency in Hertz:

Selections: a value from **0.5** to **4.0** Hertz

NOTE

The maximum allowable frequency for an amplitude of 35° or more is 3 Hz.

Triggered

If checked, it allows assigning a trigger through which the oscillating mirror can be activated to work in a second reading zone according to the defined parameters.

Second Zone Trigger

This parameter defines the number of the input or the phase working as trigger.

Selections: **Phase** (available only when working in On Line operating mode)

Input 1

Input 2

Second Zone Trigger Level

This parameter allows setting the active state of the trigger. When the selected state is active, the oscillating mirror starts working in the second reading zone according to the parameters set:

Selections: **Active Open**
 Active Closed

Second Zone Oscillating Mode

This parameter defines the oscillating mode of the scanner mirror to be used in the second reading zone:

Selections: **Fixed** the oscillating mirror deflects the scan line at a fixed angle of deflection (-15°).
 Continuous the scan line is deflected according to the **Second Zone Amplitude** and **Second Zone Frequency** settings.

Second Zone Amplitude (degrees)

This parameter is available only when working in Continuous Second Zone Oscillating Mode. It defines the deflection range in degrees as a symmetrical oscillation with respect to the fixed angle (-15°).

Selections: a value from **10°** to **40°**:

Second Zone Frequency (Hz)

This parameter is available only when working in Continuous Second Zone Oscillating Mode. It defines the oscillating frequency in Hertz:

Selections: a value from **0.5** to **4.0** Hertz:


NOTE

The maximum allowable frequency for an amplitude of 35° or more is 3 Hz.

FAM2K OSCILLATING MIRROR COMPATIBILITY


OM2000N COMPATIBILITY TO DS2KA SCANNERS

If using the new OM2000N on the older DS2100A or DS2400A scanners (see scanner label), close jumpers DJ1 and DJ2 on the OM2000N board with solder bridges.

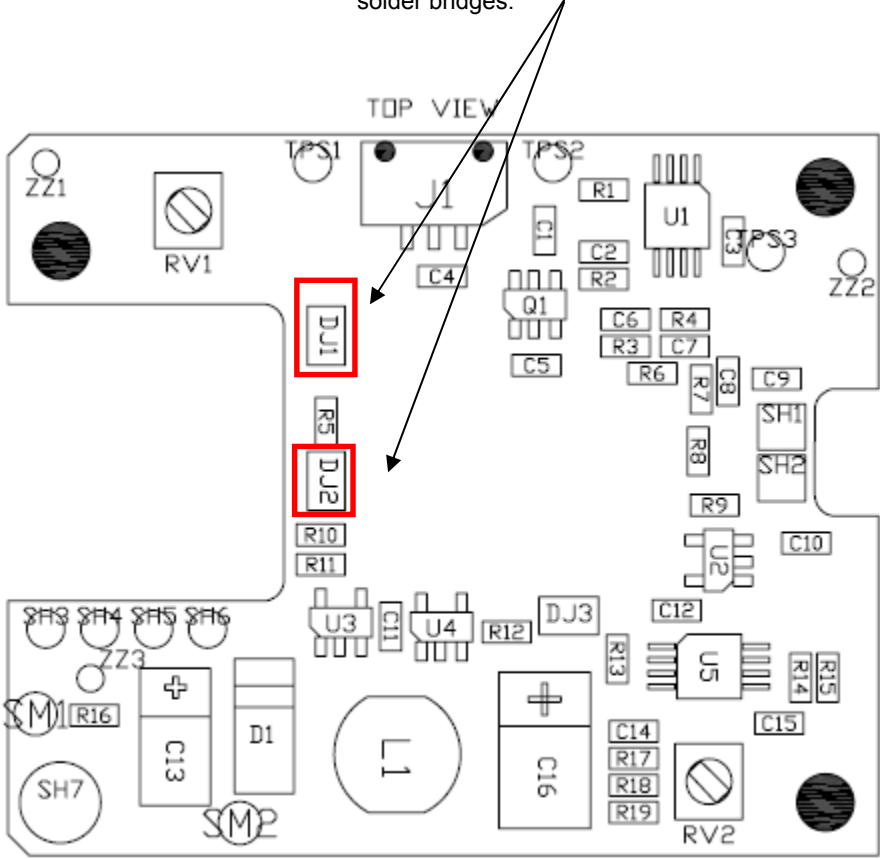


OM2000N PCB

The Oscillating mirror will function at 0.8 Hz with an aperture of 40°.

 If the OM2000N is used on a DS2100N or DS2400N these jumpers must not be soldered closed.

NOTE

OM2000 COMPATIBILITY TO DS2KN SCANNERS

 The older OM2000 is fully compatible with the new DS2100N or DS2400N. Follow the instructions in the OM2000 manual for frequency and aperture settings.

NOTE

TECHNICAL FEATURES


ELECTRICAL FEATURES	
Operating voltage	10 to 30 Vdc
Input current max	40 mA (RMS) @ 10 Vdc; 1.2 A max peak current @ 10 Vdc at startup for max duration = 100 ms
Power Consumption max	1 W (RMS) @ 30 Vdc
Raster width	software adjustable from 10° to 40°
Oscillation frequency	software adjustable from 0.5 Hz to 4 Hz
Response time	1s max
ENVIRONMENTAL FEATURES	
Operating temperature	0° to +45 °C (+32° to +113 °F)
Storage Temperature	-20° to +70 °C (-4° to +158 °F)
Humidity max	90% non condensing
Vibration Resistance EN 60068-2-6	- 14 mm @ 2-10 Hz - 1.5 mm @ 13-55 Hz - 2 g @ 70-200 Hz - 2 hours on each axis
Bump Resistance EN 60068-2-29	30 g; 6 ms; 5000 shocks on each axis
Shock Resistance EN 60068-2-27	30 g; 11 ms; 3 shocks on each axis
Protection Class EN 60529	IP65 (when correctly mounted to the scanner)
PHYSICAL FEATURES	
Dimensions	68 x 43 x 51.2 mm (2.68 x 1.69 x 2.02 in)
Weight	approximately 160 g. (5.7 oz)

Note: the features indicated are to be considered typical at an ambient temperature of 25 °C (77 °F), if not specified differently.

MAINTENANCE AND TROUBLESHOOTING

OM2000N has no user replaceable components and, apart from periodically cleaning the output window, no particular maintenance is necessary; dust and dirt on the surface may alter the reading performance of the system.

Clean the window with soft material and alcohol, absolutely avoiding all abrasive substances.

	<p><i>Do not remain in the laser beam output zone during these procedures.</i></p>
<p>WARNING</p>	

If the device does not operate correctly, verify the connection to the scanner.

SERVICES AND SUPPORT

Datalogic provides several services as well as technical support through its website. Log on to www.automation.datalogic.com and click on the [links](#) indicated for further information including:

- **PRODUCTS**

Search through the links to arrive at your product page where you can download specific **Manuals** and **Software & Utilities** including:

- **Genius™** a utility program, which allows device configuration using a PC. It provides RS232 interface configuration.

- **SERVICES & SUPPORT**

- **Datalogic Services** - Warranty Extensions and Maintenance Agreements

- **Authorised Repair Centres**

- **CONTACT US**

E-mail form and listing of Datalogic Subsidiaries

COMPLIANCE

LASER SAFETY



WARNING

Once the scanner-oscillating mirror reading system is assembled, the laser beam is emitted from the output window of the OM2000N. All the precautions regarding laser exposure must be taken, (details are given in the Installation Manual of the scanner).

CE COMPLIANCE

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC COMPLIANCE

Modifications or changes to this equipment without the expressed written approval of Datalogic could void the authority to use the equipment.

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Datalogic Automation S.r.l.**

Via S. Vitalino 13

40012 Lippo di Calderara di Reno

Bologna – Italy

www.automation.datalogic.com*declares that the***OM2000N; Oscillating Mirror Laser Scanner***and all its models**are in conformity with the requirements of the European Council Directives listed below:***2004 / 108 / EC EMC Directive***This Declaration is based upon compliance of the products to the following standards:***EN 55022 (CLASS A ITE), SEPTEMBER 1998:***INFORMATION TECHNOLOGY EQUIPMENT
RADIO DISTURBANCE CHARACTERISTICS
LIMITS AND METHODS OF MEASUREMENTS***EN 61000-6-2, SEPTEMBER 2005:***ELECTROMAGNETIC COMPATIBILITY (EMC)
PART 6-2: GENERIC STANDARDS - IMMUNITY FOR INDUSTRIAL
ENVIRONMENTS*

Lippo di Calderara, July 16th, 2009

Lorenzo Girotti
Product & Process Quality Manager